

Miniature and Subminiature Solenoid Valves

Gems specializes in made-to-order fluidic systems, and a major segment of that activity includes the integration of miniature solenoid valves and manifold assemblies. Our miniature and subminiature solenoid valves are utilized in solutions that serve industries ranging from medical and biotech to automotive and industrial equipment.

Gems solenoid valves are designed to your specifications for each unique application. Each series offers a broad range of construction/performance options to build an endless array of configurations—too many to list in this catalog. From custom coils and manifolds to exotic materials and flow characteristics, there is very little that we cannot accomplish. Whether pneumatic or liquid, cryogenic or high temperature, vacuum or high-pressure, we partner with you to identify, create, and produce the best possible fluidic solution.

If at any time, you have a question or simply want to give us your requirements and have Gems Sensor and Controls design your valve or system, please contact us by phone at 800-378-1600 or email us at info@gemssensors.com.

Contents	Page Start
General Purpose	J-5
Isolation.....	J-19
Inert Isolation.....	J-23
Cryogenic	J-35

Get Help Quick

An application data sheet (ADS), located on page J-40, will help you select performance criteria and options. Fax it directly to a Gems Valve Engineer at 860-747-4244 or configure your valve online for RFQ at www.gemssensors.com.

General Purpose Valves

A broad range of 2- and 3-way solenoid valves in both miniature and subminiature sizes. A wide selection of configuration options allows easy customization to match specific application requirements.



Isolation Valves

Isolation diaphragms protect media and moving parts alike. Ideal for high-purity and aggressive media applications.



Cryogenic Valves

These valves provide reliable service to media temperatures as low as -320°F (-196°C). Ideal for liquid Nitrogen and Carbon Dioxide use.



4 Steps to Valve Selection

The steps described in this section will help you identify the performance criteria needed to meet your application requirements and select the right valve.

Step 1 – Calculating C_v

Begin by calculating the valve flow coefficient (C_v) using: operating pressure differential; flow rate for your application; Specific Gravity; and in some circumstances, temperature. If you already know your C_v please go directly to Step 2.

C_v combines the effects of all flow restrictions in the valve into a single number. C_v represents the quantity of water, at 68°F and in gallons per minute (GPM) that will flow through your valve with a 1 psi pressure differential. C_v can also be calculated for gases.

Specific Gravity (SG) for liquid is the ratio of the density, or specific weight of the liquid, relative to that of water. Similarly, the SG for gas is the ratio of the density, or specific weight of the gas, relative to that of air. The SG of your media is important in calculating C_v because it directly correlates to the flow rate through your valve.

Liquid Flow

Because liquids are incompressible, their flow rate depends only on the difference between the inlet and outlet pressures ($P_1 - P_2$ or ΔP , pressure differential. Figure 1).

The C_v of any valve flowing liquid media can be determined with the equation shown to the right.

Example: Using Water at 68°F:

$V = 3.08$ GPM
 $P_1 = 100$ PSI
 $P_2 = 40$ PSI
 $SG = 1$

$$C_v = \frac{3.08}{\sqrt{\frac{100-40}{1}}} = .398$$

Fig. 1: Press Differential



Pressure differential is the difference between the inlet and outlet pressures.

Gas Flow

Since gases are compressible fluids there are two separate equations for high and low-pressure differential flow.

Example: Using Air:

$V = 10$ SCFM
 $P_1 = 20$ PSIG = 34.7 PSIA (20 + 14.7)
 $P_2 = 0$ PSIG = 14.7 PSIA (0 + 14.7)
 $SG = 1$
 $T = 72^\circ F = 532^\circ \text{ Rankine } (72 + 460)$

Since this is high-pressure differential flow ($14.7 \leq 34.7 / 2$), we use the following equation:

$$C_v = \frac{10}{13.61 \cdot 34.7 \sqrt{\frac{1}{(1) 532}}} = .49$$

For help calculating your C_v , please contact a Gems valve engineer at 800-378-1600 or info@gemssensors.com.

Temperature and C_v

Temperature is not included in the C_v calculation for non-compressible fluids (liquids) and is only used in determining SG. Conversely, because gases are compressible, temperature (T) has a greater effect on volume and therefore is included as a separate variable in gas C_v calculations. flow rate through your valve.

Liquid Flow Formula

$$C_v = \frac{V}{\sqrt{\frac{\Delta P}{SG}}}$$

Where:

CV = Valve flow coefficient
V = Flow rate in GPM
 ΔP = Pressure differential (PSID)
SG = Specific Gravity

Gas Flow C_v Formula

- Low-pressure differential flow is when $P_2 > \frac{P_1}{2}$ and the following equation is used:

$$C_v = \frac{V}{16.05 \sqrt{\frac{(P_1^2 - P_2^2)}{(SG) T}}}$$

- High-pressure differential flow is when $P_2 \leq \frac{P_1}{2}$ and the following equation is used:

$$C_v = \frac{V}{13.61 P_1 \sqrt{\frac{1}{(SG) T}}}$$

Where:

CV = Valve flow coefficient
V = Flow rate in SCFM
P1 = Inlet pressure in PSIA
P2 = Outlet pressure in PSIA
SG = Specific Gravity
T = Temperature of gas in Degree Rankine

16.05 and 13.61 are constants used in gas flow equations

Step 2 – Valve Function

Identify how your valve will function in your application. Pick from the choices below.

An important note regarding C_v and valve function:


The C_v calculated will apply to either the Body Orifice or the Stop Orifice depending on the valve's function.

For example, the Stop Orifice for a 3-way normally closed valve, when de-energized, is the exhaust port. In other words, C_v is calculated using the specific Inlet Pressure (P1) and Outlet Pressure (P2) for the flow paths described below.


Flow Key

- Blocked Flow
- Free Flow


2-WAY NORMALLY CLOSED

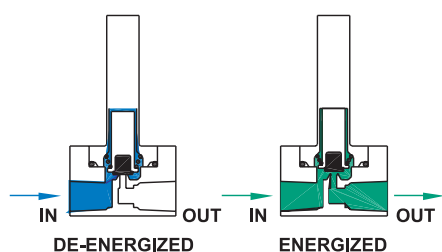


2-WAY NORMALLY OPEN

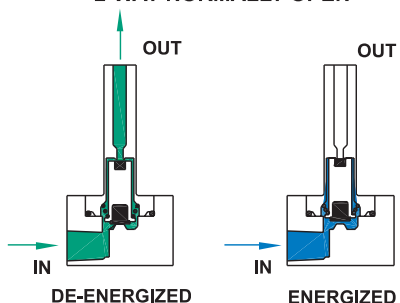


2-WAY NORMALLY CLOSED ISOLATION

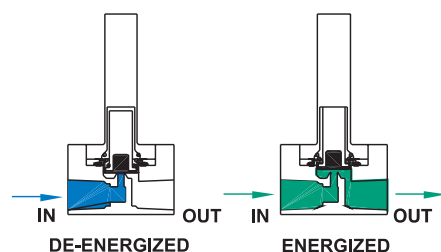


3-WAY NORMALLY CLOSED

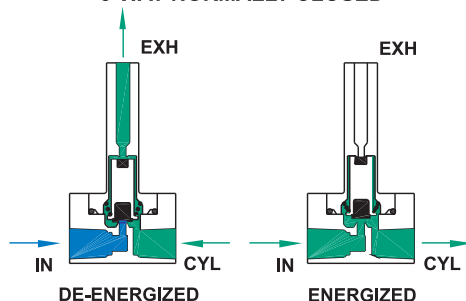


3-WAY NORMALLY OPEN

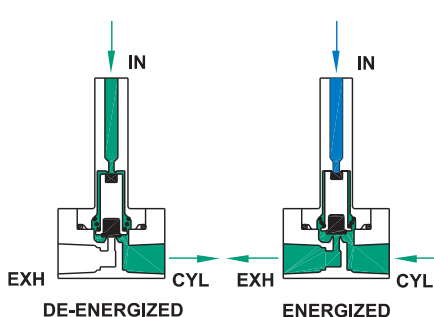

3-WAY MULTI-PURPOSE

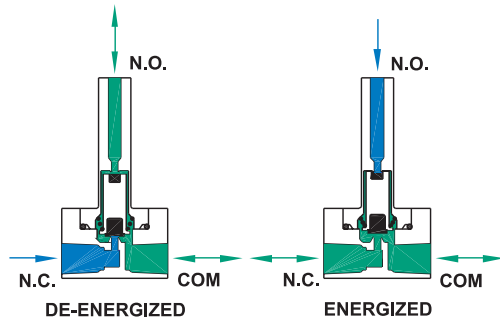

3-WAY DIRECTIONAL CONTROL

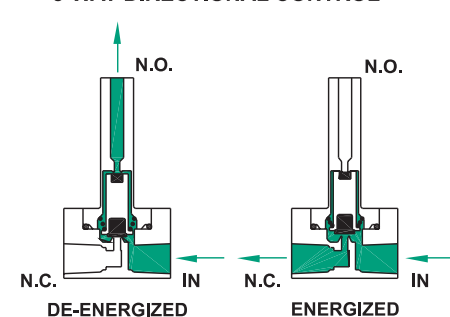

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

Step 3 – Identify Your Valve Series

Select possible valve series candidate using the overview charts below. Begin by choosing the category for your application:

- General Purpose
- Isolation
- Cryogenic

Using the charts, select maximum operating pressure differential (MOPD), the C_v , function, and additional specifications needed for your application to select possible valve series. The detailed performance specs for each series are located on the corresponding pages listed on the chart.

If you would like assistance with your selection, want to modify a valve, or simply want a sounding board please contact a Gems™ valve engineer at 800-378-1600 or info@gemssensors.com.

	General Purpose					
Function	2- & 3-Way					
Media	Gas Only	Gas & Liquid				
Size	Sub-Miniature			Miniature		
C_v Range	0.018 - 0.070			0.019 - 0.430	0.045 - 0.880	
Port Configuration	#10-32 Manifold Mount	Barb (1/16, 5/64, 1/8), Manifold or Face-Mount	#10-32, 1/8, 1/4 NPT, Manifold Mount			1/8, 1/4, 3/8 NPT, Manifold Mount
Orifice Dia (in)	0.032 - 0.078	0.031 - 0.052	0.032 - 0.156	0.062 - 0.210	0.047 - 0.375	
Power (watt)	0.65, 2	0.5, 1, 2	6	7	10	
MOPD (psi)	175	250	100	1000	400	900
Valve Series	E, EH	G, GH	M	A	B	C
Pages	J-7, J-8	J-9, J-10	J-5, J-6	J-11, J-12	J-13, J-14	J-15, J-16

	Cryogenic		Isolation		Inert Isolation
Function	2-Way, Normally Closed Only		2-Way, Normally Closed Only		See page J-24
Media	Liquid		Gas & Liquid		
Size	Miniature		Miniature		
C _v Range	0.045 - 0.440	0.040 - 0.770	0.020 - 0.300		
Port Configuration	1/8, 1/4 NPT	1/8, 1/4, 3/8 NPT	#10-32, 1/8 NPT, 1/4 NPT, Manifold Mount		
Orifice Dia (in)	0.046 - 0.188	0.046 - 0.250	0.032 - 0.156		
Power (watt)	9	15	4.5, 7		
MOPD (psi)	900	1000*	50 (Plastic Body), 150		
Valve Series	B-Cryo	D-Cryo	AS	BS	
Pages	J-35, J-36	J-37, J-38	J-19, J-20	J-21, J-22	

*Consult factory for higher MOPD.

Step 4 – Make Your Selection and Configure Your Valve

Complete your valve design by selecting the additional design parameters to build the best possible valve. For example:

- Materials needed for your media (stainless steel, brass, fluoroelastomer, EPDM, etc.)
- Coil construction (lead wire, quick connect spade, grommet, conduit, yoke, etc.)
- Port configuration
- Manifold assembly
- Voltage

For help selecting the additional options for your valve or if you want to confirm that your selection is the best choice or work with an engineer on integrating a fluidic system into your application, contact us at 800-378-1600 or info@gemssensors.com. We are happy to assist. You can also place orders through these same channels.

We specialize in application specific valves. Our modular valve designs, coupled with our cutting edge 3D modeling and innovative CNC manufacturing capabilities, result in fluidic systems that are truly adaptable to any originally manufactured equipment.

M Series – Subminiature

- ▶ MOPD: 100 PSI
- ▶ C_v Range: 0.018 to 0.070
- ▶ As Low As 0.5 Watts

The M Series implements efficient power conservation in a solenoid valve that is specifically designed for sub-miniature two- and three-way pneumatic and select liquid applications. Field proven to exceed performance requirements in battery-powered applications, the M Series can be designed for extreme low wattage conditions. With a compact size, consistent high-speed response time, and reliable operation over 200 million cycles, the M Series delivers extended performance and precision flow control in a small lightweight environment.


Typical Applications

Ideal for inline PC interfacing and manifold assemblies:


- Medical and Therapeutic Healthcare
- Clinical Chemistry and Analysis Equipment
- Drop-on-Demand Printing
- Environmental Instrumentation

Dimensions

Threaded Port Body

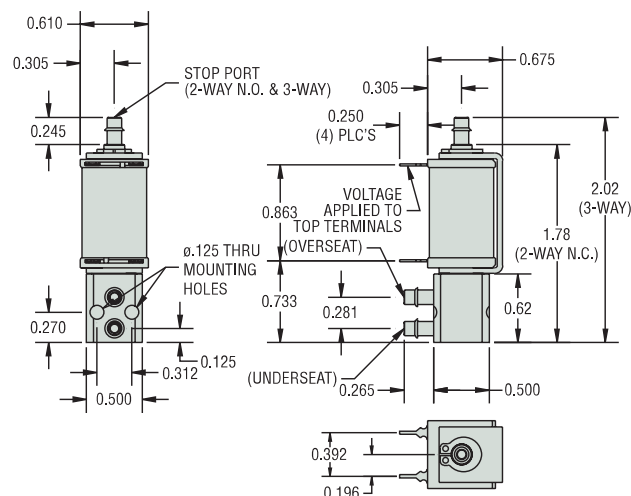

Manifold Mount Body

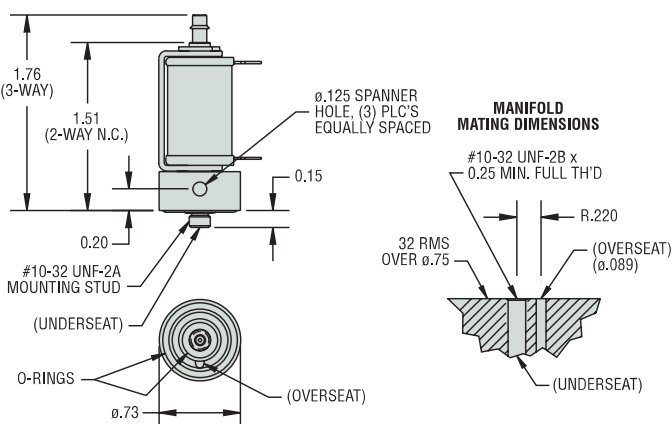

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

MB	31	5	-	E	B	3	3	-	P	201	-	OC
1	2	3		4	5	6	7		8	9		10
Primary Prefix	Valve Type	Orifice Size		Plunger Seal/O-Ring Material	Body Material	Body Port Configuration	Stop Port Configuration		Coil Construction	Voltage		Additional Options

Note: After the Primary Prefix, any '-Code' may be blank when standard (blank) selections are specified.

Example:

MB315-EB33-P-201

1 Watt 3-Way N.C. solenoid valve with a 0.052" orifice, EPDM plunger seal/o-ring, brass body, 1/8" barb body and stop port, P.C. board mount (4-pin), operating at 5 VDC, and is cleaned for oxygen use.



Part Prefix Table ①

Power Rating	Orifice	MOPD (psig)	C _v	① Primary Prefix
			Body	
0.5 Watt	0.031	25	0.020	MA
	0.052	10	0.038	MA
1 Watt	0.031	50	0.020	MB
	0.052	25	0.038	MB
2 Watts	0.031	100	0.020	MC
	0.052	50	0.038	MC

② Valve Type

- 20 = 2-Way normally closed
- 22 = 2-Way normally open
- 30 = 3-Way normally closed (free vent)
- 31 = 3-Way normally closed (line connection)
- 32 = 3-Way normally open
- 33 = 3-Way multi-purpose
- 34 = 3-Way directional control

③ Orifice Size

- 2 = 0.031"
- 5 = 0.052"

④ Plunger Seal / O-Ring Material

- V = Viton®
- N = Nitrile
- E = EPDM

⑤ Body Material

- B = Brass
- A = Aluminum

⑥ Body Port Configuration

- 0 = Face mount
- 1 = 1/16" barb
- 2 = 5/64" or 3/32" barb
- 3 = 1/8" barb
- 4 = Manifold mount, #10-32 UNF-2A stud†
- 5 = #10-32 UNF-2B female thread (180° apart only)
- 6 = 1/8"-27 NPT ports (180° apart only)

⑦ Stop Port Configuration

- 0 = No barb (Standard for 2-way NC & 3-way free vent)
- 1 = 1/16" barb (.031" orifice only)
- 2 = 5/64" or 3/32" barb
- 3 = 1/8" barb

⑧ Coil Construction

- U = P.C. board solderable (2-pin)
- P = P.C. board mount (4-pin)
- Q = Quick connect 0.110 spade
- L = Lead-wires, #26 AWG, 18" long
- W__ = Lead-wires (Specify length in inches)

⑨ Voltage

- 200 = 3 VDC
- 201 = 5 VDC
- 203 = 12 VDC
- 204 = 24 VDC
- __VDC = DC (specify voltage)
- __VAC = AC Rectified 2-watt coil only (specify voltage, lead-wires only)

⑩ Additional Options

- OC = Cleaned for oxygen use
- VAC = Vacuum application (0 to 27" Hg)

† Teflon® o-ring not suitable for manifold mount.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

E & EH Series – Subminiature Gas

- ▶ MOPD: 175 PSI
- ▶ C_v Range: 0.018 to 0.070
- ▶ 0.65 Watts or 2 Watts


A 2- or 3-way sub-miniature solenoid valve that delivers faster response times—and higher flow rates, the E & EH Series is specifically engineered for air and dry gas applications. A nickel-plated body and coil housing construction produces a highly durable, corrosion resistant valve. With a wattage range of 0.65–2 the E & EH Series provides versatility for power conserving, high pressure, and high flow applications.

Typical Applications



- Medical and Respiratory Healthcare
- Printing Machinery and Sorting Equipment
- Automated Packaging Equipment
- Air Monitoring Systems

Dimensions

Threaded Port Body

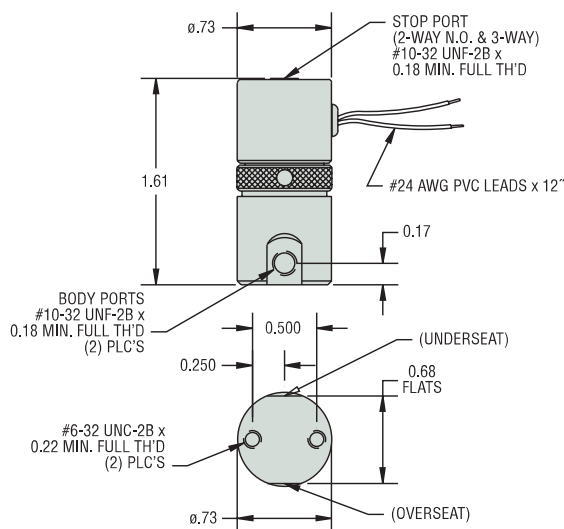


Manifold Mount Body

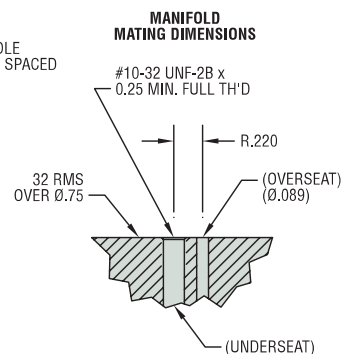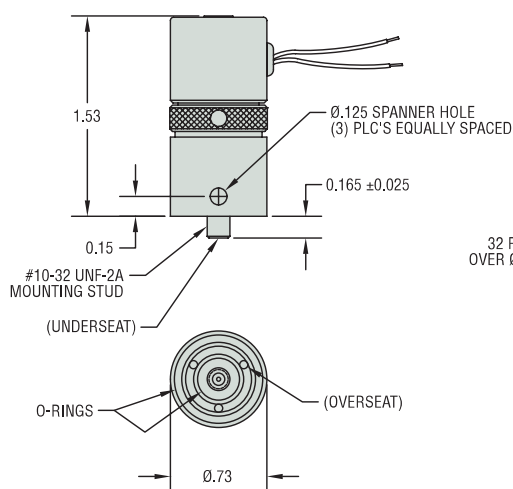

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

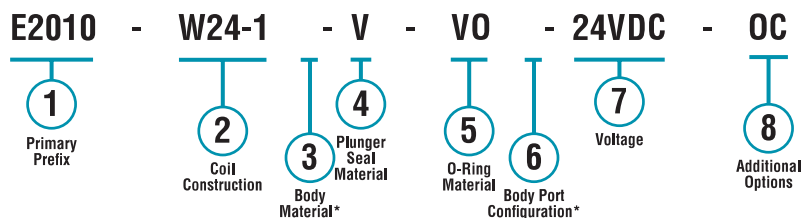

* Blank entry indicates a "Standard" selection (#10-32 straight thread ports, in this case).

Example:

E2010-W24-1-V-VO-24VDC-OC

E-Series 2-Way N.C. solenoid valve, with 24" lead-wires from an encapsulated coil, nickel-plated brass body, Viton® plunger seal, Viton® o-ring, #10-32 straight thread ports, operating at 24 VDC, and is cleaned for oxygen use.



Part Prefix Table ①

	Power Rating	Orifice		MOPD (psig)	C _v		① Primary Prefix
		Body	Stop		Body	Stop	
2-WAY N.C.	0.65W	1/32	—	125	0.018	—	E2010
		3/64	—	70	0.023	—	E2011
		1/16	—	40	0.036	—	E2012
		5/64	—	20	0.070	—	E2013
	2W	1/32	—	175	0.018	—	EH2010
		3/64	—	150	0.023	—	EH2011
		1/16	—	100	0.036	—	EH2012
		5/64	—	50	0.070	—	EH2013
2-WAY N.O.	0.65W	—	1/32	125	—	0.018	E2210
		—	3/64	70	—	0.023	E2211
		—	1/16	40	—	0.032	E2212
	2W	—	1/32	175	—	0.018	EH2210
		—	3/64	150	—	0.023	EH2211
		—	1/16	100	—	0.032	EH2212
3-WAY N.C.	0.65W	1/32	1/32	125	0.018	0.018	E3010
		3/64	3/64	70	0.023	0.023	E3011
		1/16	1/16	40	0.036	0.032	E3012
	2W	1/32	1/32	175	0.018	0.018	EH3010
		3/64	3/64	150	0.023	0.023	EH3011
		1/16	1/16	100	0.036	0.032	EH3012
3-WAY N.O.	0.65W	1/32	1/32	125	0.018	0.018	E3210
		3/64	3/64	70	0.023	0.023	E3211
		1/16	1/16	40	0.036	0.032	E3212
	2W	1/32	1/32	175	0.018	0.018	EH3210
		3/64	3/64	150	0.023	0.023	EH3211
		1/16	1/16	100	0.036	0.032	EH3212
3-WAY Multi Purpose	0.65W	1/32	1/32	80	0.018	0.018	E3310
		3/64	3/64	40	0.023	0.023	E3311
		1/16	1/16	20	0.036	0.032	E3312
	2W	1/32	1/32	150	0.018	0.018	EH3310
		3/64	3/64	100	0.023	0.023	EH3311
		1/16	1/16	50	0.036	0.032	EH3312
3-WAY Directional Control	0.65W	1/32	1/32	135	0.018	0.018	E3410
		3/64	3/64	80	0.023	0.023	E3411
		1/16	1/16	45	0.036	0.032	E3412
	2W	1/32	1/32	190	0.018	0.018	EH3410
		3/64	3/64	165	0.023	0.023	EH3411
		1/16	1/16	80	0.036	0.032	EH3412

② Coil Construction

(blank) = Tape-wrapped, Class-B, with lead-wires (12" long)*

W__ = Lead-wires, non-standard length (specify in inches)

1 = Encapsulated coil

5 = Encapsulated coil with 0.110 spade terminals

10 = Rectified coil for AC voltage (2 watt only)

③ Body Material

(blank) = Nickel-plated brass*

④ Plunger Seal Material

(blank) = Nitrile*

V = Viton®

E = EPR

MQ = Silicone

⑤ O-Ring Material

(blank) = Nitrile*

VO = Viton®

EO = EPR

MQO = Silicone

⑥ Body Port Configuration

(blank) = #10-32 straight thread ports*

BM = M5 x 0.8 ports

MM = Manifold mount with #10-32 threaded stud†

MM2 = Manifold mount with M5 x 0.8 threaded stud†

BO = Bottom under-seat port (max orifice = 1/16")

⑦ Voltage

__VDC = DC (specify voltage)

__VAC = AC rectified 2-watt only (specify voltage)

⑧ Additional Options

OC = Cleaned for oxygen use

QQ = Quiet operation (2-way N.C.)

VAC = Vacuum application (0 to 29.5" Hg)

* Standard selection; will be used unless otherwise specified.
Standard selections are not referenced in final part number.

† Teflon® o-ring not suitable for manifold mount.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

G & GH Series – Subminiature

- ▶ MOPD: 250 PSI
- ▶ C_v Range: 0.018 to 0.070
- ▶ 0.65 Watts or 2 Watts

This extremely versatile 2- or 3-way sub-miniature valve gives you the option of choosing the highly durable stainless steel or the lightweight corrosion resistant acetal body, to meet your overall design parameters. Select stainless steel or Delrin®, and other materials available to resist corrosion in most acids and alkaline solutions, or pick acetal for a tough and heat resistant metal substitute to meet your weight and chemical inert requirements.

Typical Applications

Stainless Steel Bodies:

- Hospital Equipment
- Laboratory Equipment
- Air Sampling Systems


Acetal Bodies:

- Water Purification Systems
- Analytical Equipment





Dimensions

Threaded Port Body

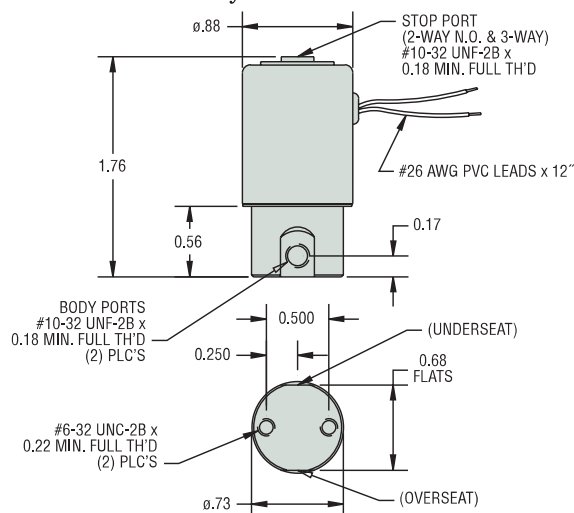


Manifold Mount Body

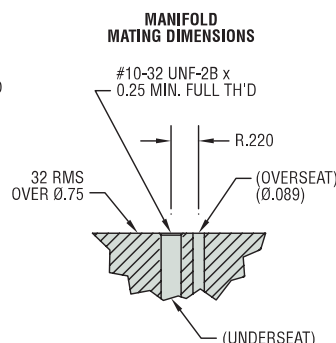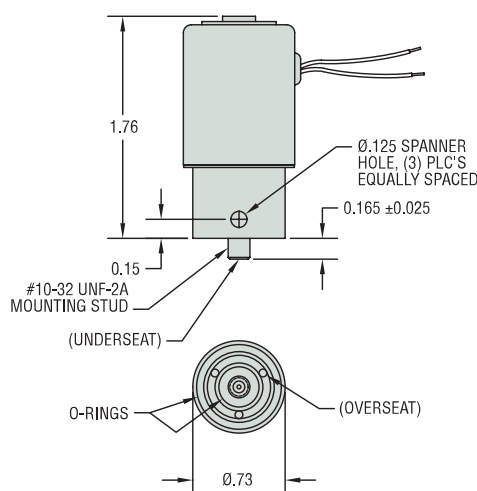

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

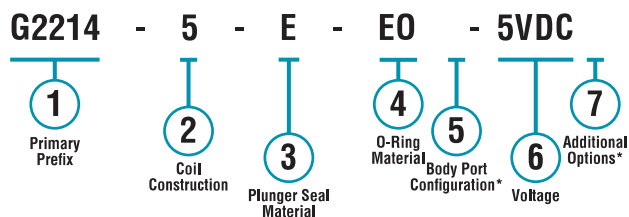

* Blank entry indicates a "Standard" selection (#10-32 straight thread ports, in this case).

Example:

G2214-5-E-EO-5VDC

G-Series 303 Stainless Steel 2-Way N.O. solenoid valve, with tape-wrapped, Class-B, with lead-wires (12" long), encapsulated coil with 0.110 spade terminals, EPR plunger seal, EPR o-ring, #10-32 straight thread ports, operating at 5 VDC.

Part Prefix Table ①

	Power Rating	Orifice		MOPD (psig)	C _v		① Primary Prefix	
		Body	Stop		Body	Stop	303 Stainless Steel [†]	Acetal (#10-32 port only)
2-WAY N.C.	0.65W	0.030	—	125	0.018	—	G2012	G2032
		0.040	—	70	0.023	—	G2013	G2033
		0.055	—	40	0.038	—	G2014	G2034
		0.078	—	20	0.063	—	G2015	G2035
	2W	0.030	—	250	0.018	—	GH2012	GH2032
		0.040	—	175	0.023	—	GH2013	GH2033
		0.055	—	100	0.038	—	GH2014	GH2034
		0.078	—	50	0.063	—	GH2015	GH2035
2-WAY N.O.	0.65W	—	0.030	125	—	0.018	G2212	G2232
		—	0.040	70	—	0.023	G2213	G2233
		—	0.055	40	—	0.038	G2214	G2234
		—	0.078	20	—	0.057	G2215	G2235
	2W	—	0.030	200	—	0.018	GH2212	GH2232
		—	0.040	150	—	0.023	GH2213	GH2233
		—	0.055	100	—	0.038	GH2214	GH2234
		—	0.078	50	—	0.057	GH2215	GH2235
3-WAY N.C.	0.65W	0.030	0.030	125	0.018	0.018	G3012	G3032
		0.040	0.040	70	0.023	0.023	G3013	G3033
		0.055	0.055	40	0.038	0.038	G3014	G3034
		0.078	0.078	20	0.063	0.057	G3015	G3035
	2W	0.032	0.030	200	0.018	0.018	GH3012	GH3032
		0.040	0.040	150	0.023	0.023	GH3013	GH3033
		0.055	0.055	100	0.038	0.038	GH3014	GH3034
		0.078	0.078	50	0.063	0.057	GH3015	GH3035
3-WAY N.O.	0.65W	0.030	0.030	125	0.018	0.018	G3212	G3232
		0.040	0.040	70	0.023	0.023	G3213	G3233
		0.055	0.055	40	0.038	0.038	G3214	G3234
		0.078	0.078	20	0.057	0.057	G3215	G3235
	2W	0.030	0.030	175	0.018	0.018	GH3212	GH3232
		0.040	0.040	150	0.023	0.023	GH3213	GH3233
		0.055	0.055	80	0.038	0.038	GH3214	GH3234
		0.078	0.078	40	0.057	0.057	GH3215	GH3235
3-WAY Multi Purpose	0.65W	0.030	0.030	80	0.018	0.018	G3312	G3332
		0.040	0.040	40	0.023	0.023	G3313	G3333
		0.055	0.055	20	0.036	0.029	G3314	G3334
		0.078	0.078	10	0.063	0.053	G3315	G3335
	2W	0.030	0.030	110	0.018	0.018	GH3312	GH3332
		0.040	0.040	85	0.023	0.023	GH3313	GH3333
		0.055	0.055	50	0.036	0.029	GH3314	GH3334
		0.078	0.078	25	0.063	0.057	GH3315	GH3335
3-WAY Directional Control	0.65W	0.030	0.030	135	0.018	0.018	G3412	G3432
		0.040	0.040	80	0.023	0.023	G3413	G3433
		0.055	0.055	45	0.029	0.029	G3414	G3434
		0.078	0.078	20	0.063	0.055	G3415	G3435
	2W	0.030	0.030	190	0.018	0.018	GH3412	GH3432
		0.040	0.040	165	0.023	0.020	GH3413	GH3433
		0.055	0.055	80	0.038	0.038	GH3414	GH3434
		0.078	0.078	40	0.063	0.063	GH3415	GH3435

② Coil Construction

(blank) = Tape-wrapped, Class-B, with lead-wires (12" long)*

W = Lead-wires, non-standard length (specify in inches)

1 = Encapsulated coil

5 = Encapsulated coil with 0.110 spade terminals

10 = Rectified coil for AC voltage (2-watt only)

③ Plunger Seal Material

(blank) = Viton®*

NB = Nitrile

E = EPDM

N = Neoprene

④ O-Ring Material

(blank) = Viton®*

NBO = Nitrile

EO = EPDM

NO = Neoprene

⑤ Body Port Configuration

(blank) = #10-32 straight thread ports*

LC = 1/8"-27 NPT ports (2-way valves only)²BM = M5 x 0.8 ports²MM = Manifold mount with #10-32 threaded stud^{2†}MM2 = Manifold mount with M5 x 0.8 threaded stud^{2†}

⑥ Voltage

— VDC = DC (specify voltage)

— VAC = AC Rectified 2-watt only (specify voltage)

⑦ Additional Options

OC = Cleaned for oxygen use

TP = PTFE coated plunger

VAC = Vacuum application (0 to 29.5" Hg)

* Standard selection; will be used unless otherwise specified.
Standard selections are not referenced in final part number.

Notes

1. Use prefixes from this column if you plan to select a Body Port Configuration other than the #10-32 straight thread ports.

2. Not available on Acetal bodies.

[†] Teflon® o-ring not suitable for manifold mount.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

A Series

- ▶ MOPD: 1000 PSI
- ▶ C_v Range: 0.019 to 0.3
- ▶ 6 Watts

The A Series gives you a highly adaptable design for practically all applications requiring flow between C_v 0.019 and 0.300. This robust 2- or 3-way miniature solenoid utilizes a stainless steel body to resist corrosion for most acids, alkaline solutions, and harsh environments. Also available in plastic—from polypropylene to Delrin®—when specific inert or demanding requirements are needed. Available in numerous port configurations, orifice sizes, and material combinations, the A Series is a highly flexible valve that fulfills the requirements for most applications.

Typical Applications

Stainless Steel Bodies:


- Medical Equipment
- Laboratory Equipment
- Food Processing Equipment

Brass Bodies:


- Industrial Applications
- Automotive
- Water Transfer Systems

Dimensions


Threaded Port Body

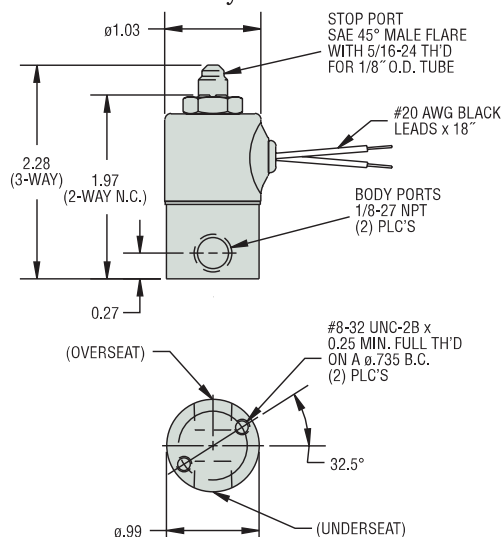

Manifold Mount Body

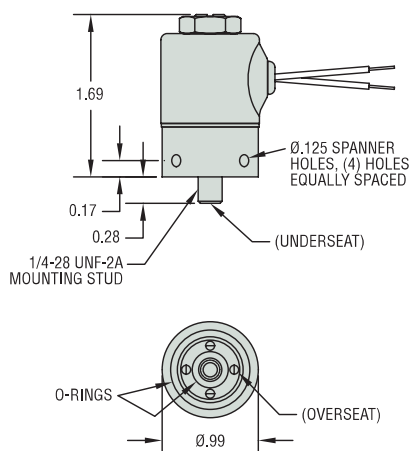


Molded Coil

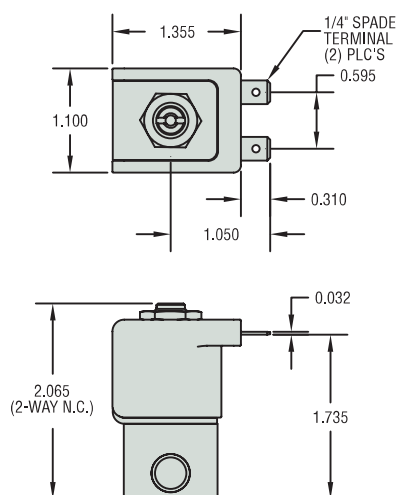

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

A2213 - 3 - BB - N - NO - LB - 110/60VAC - WM-TP

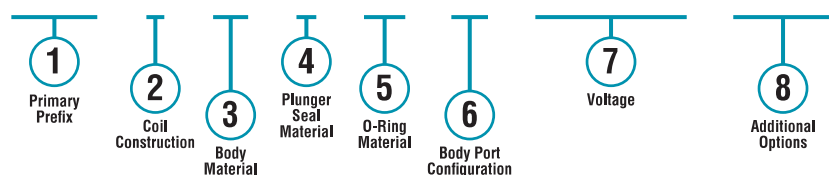

Note: After the Primary Prefix, any "-Code" may be blank when standard (blank) selections are specified.

Example:


A2213-3-BB-N-NO-LB-110/60VAC-WM-TP

2-Way N.O. (with 1/8"-27 NPT stop port adaptor) solenoid valve, with brass body, neoprene plunger seal, neoprene O-ring, 1/4"-18 FNPT body ports, operating at 110/60 VAC/Hz, and includes the mounting bracket and PTFE coated plunger options.




Alternate 1/2" Conduit Housing

Available on all body configurations

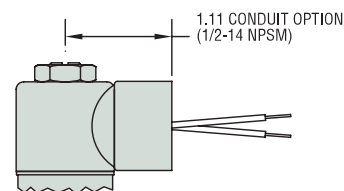

Stop Port

Standard on 2-way N.O.;
Option "AD" on 3-Way.

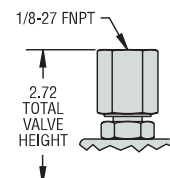

Part Prefix Table ①

	Orifice		MOPD (psig)	C _v		① Primary Prefix	
	Body	Stop		Body	Stop	Grommet Housing	Conduit Housing
2-WAY N.C.	1/32	—	1000	0.020	—	A2011	A2021
	3/64	—	500	0.035	—	A2012	A2022
	1/16	—	300	0.065	—	A2013	A2023
	5/64	—	200	0.090	—	A2014	A2024
	3/32	—	175	0.155	—	A2015	A2025
	1/8	—	100	0.240	—	A2016	A2026
	5/32	—	50	0.300	—	A2017	A2027
2-WAY N.O. (option AD standard)	—	1/32	200	—	0.019	A2211	A2221
	—	3/64	150	—	0.040	A2212	A2222
	—	1/16	100	—	0.075	A2213	A2223
3-WAY N.C. Free Vent	1/32	1/32	200	0.019	0.019	A3011	A3021
	3/64	3/64	150	0.040	0.040	A3012	A3022
	1/16	3/64	100	0.070	0.040	A3013	A3023
	1/16	1/16	75	0.070	0.070	A3014	A3024
3-WAY N.C. Line Connection	3/32	3/64	50	0.170	0.040	A3015	A3025
	1/32	1/32	200	0.019	0.019	A3111	A3121
	3/64	3/64	150	0.040	0.040	A3112	A3122
	1/16	3/64	100	0.070	0.040	A3113	A3123
	1/16	1/16	75	0.070	0.070	A3114	A3124
3-WAY N.O.	3/32	3/64	50	0.170	0.040	A3115	A3125
	1/32	1/32	150	0.019	0.019	A3211	A3221
	3/64	3/64	100	0.040	0.040	A3212	A3222
	1/16	3/64	90	0.070	0.040	A3213	A3223
	1/16	1/16	75	0.070	0.070	A3214	A3224
3-WAY Multi Purpose	3/32	3/64	50	0.170	0.040	A3215	A3225
	1/32	1/32	125	0.019	0.019	A3311	A3321
	3/64	3/64	100	0.040	0.040	A3312	A3322
	1/16	3/64	90	0.070	0.040	A3313	A3323
	1/16	1/16	75	0.070	0.070	A3314	A3324
3-WAY Directional Control	3/32	3/64	25	0.170	0.040	A3315	A3325
	1/32	1/32	225	0.019	0.019	A3411	A3421
	3/64	3/64	150	0.040	0.040	A3412	A3422
	1/16	3/64	100	0.070	0.040	A3413	A3423
	1/16	1/16	75	0.070	0.070	A3414	A3424
	3/32	3/64	50	0.155	0.040	A3415	A3425

② Coil Construction

(blank) = Tape-wrapped, Class-B, with 18" lead wires*

W___ = Tape-wrapped coil, lead-wires, non-standard length
(specify length)

1M = Over molded coil, Class-B, lead-wires

2M = Over molded coil, Class-F, lead-wires

3M = Over molded coil, Class-H, lead-wires

4M = Over molded coil, Class-B, 1/4" spade terminals

5M = Over molded coil, Class F, 1/4" spade terminals

6M = Over molded coil Class H, 1/4" spade terminals

4 = Encapsulated coil, Class-B, 3/16" spade terminals

5 = Encapsulated coil, Class-B, 0.110" spade terminals

8 = Encapsulated coil, Class F, 3/16" spade terminals

10 = Externally rectified coil (lead wires only)

11 = Tape-wrapped coil, Class H, lead wires

HC = molded coil, Class F, EN175301-803 Form B DIN,
Industrial, 11mm, 2+1 polesHC2 = Encapsulated coil, Class B, EN175301-803 Form C DIN,
Industrial, 9.4mm, 2+1 poles

③ Body Material

(blank) = 303 Stainless Steel*

BB = Brass

SB = 304 Stainless Steel

SB5 = 316 Stainless Steel

SBF = 430F Stainless Steel

④ Plunger Seal Material

(blank) = Nitrile*

E = EPR

GV = Gasoline Viton® (2-way valves only)

N = Neoprene

NS = Nitrile (NSF/FDA, 2-way valves only)

PF = Perfluoroelastomer

R = Rulon® (2-way valves only)

T = PTFE

V = Viton®

⑤ O-Ring Material

(blank) = Nitrile*

EO = EPR

NO = Neoprene

NSO = Nitrile (NSF/FDA, 2-way valves only)

PFO = Perfluoroelastomer

TO = PTFE

VO = Viton®

⑥ Body Port Configuration

(blank) = 1/8-27 NPT female thread*

LB = 1/4-18 NPT female thread

BD = #10-32 female straight thread (max. orifice = 1/8")

LT = 1/8-28 BSPT female thread (2-way valves only)

LU = 1/4-19 BSPT female thread (2-way valves only)

MM = Manifold mount (1/4-28 UNF-2A mounting stud)†††

MM3 = Manifold mount (5/16-24 UNF-2A mounting stud)†††

OB = Omit body (operator style)

MB = Bottom metering (max. orifice = 3/32")

BI = Bottom over-seat port, female thread

(max. orifice = 1/8")

BIM = Bottom over-seat port, 1/8-27 NPT male thread

(max orifice = 5/64") brass body only

BO = Bottom under-seat port, female thread

BOM = Bottom under-seat port, 1/8-27 NPT male thread

(max orifice = 1/8") brass body only

RL = 90° porting - left hand

RR = 90° porting - right hand

BS = Stop port, #10-32 female straight thread†

⑦ Voltage†† (see note below)

___VDC = DC (specify DC voltage)

___VAC = AC (specify AC voltage; includes copper shading ring)

⑧ Additional Options

Y = Yoke

WM = Mounting bracket

TP = PTFE coated plunger

AD = 1/8 - 27 NPT stop port adapter (3-way valves only)

QO = Quiet operation (2-way valves only)

S = Silver shading ring

OC = Cleaned for oxygen use

VAC = Vacuum application (0 to 29.5" Hg)

G1 = One-piece 303 Stainless Steel guide assembly

G5 = One piece 316 Stainless Steel guide assembly

* Standard selection; will be used unless otherwise specified.
Standard selections are not referenced in final part number.

† Plastic body available, contact Gems.

†† Can be AC rectified without shading ring. Use coil construction Code 10.

††† Teflon® o-ring not suitable for manifold mount.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

B Series – Modular

- ▶ MOPD: 400 PSI
- ▶ C_v Range: 0.018 to 0.430
- ▶ 7 Watts

The B Series is a direct acting solenoid valve, available in 2- or 3-way functionality. Like all of our valves, the B Series has bubble tight plunger construction and is designed to last for millions of cycles in general purpose liquid, gas, and vacuum applications. The B Series is available in various orifice sizes, a variety of body materials, wattages, and coil constructions for the utmost adaptability to your application requirements. The B Series is an excellent choice for most general-purpose application requiring a C_v of 0.018 to 0.430.


Typical Applications

- Printing
- HVAC
- Semiconductor Equipment
- Medical Equipment




Dimensions


Threaded Port Body

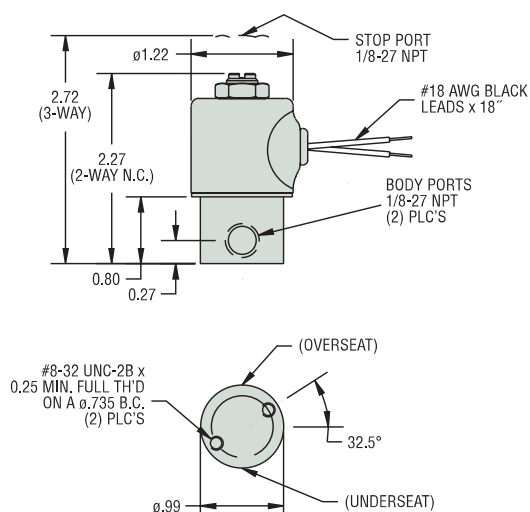

Manifold Mount Body

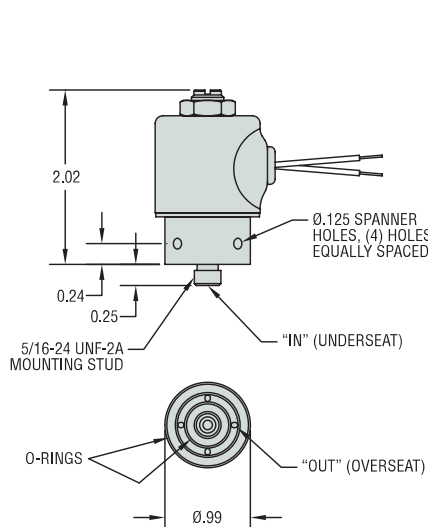


Molded Coil

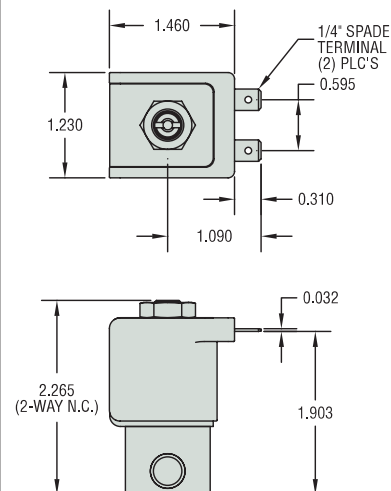

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

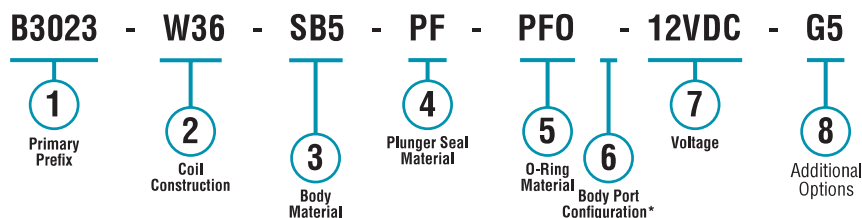

* Blank entry indicates a "Standard" selection (1/8-27 NPT female thread, in this case).


Example:

B3023-W36-SB5-PF-PFO-12VDC-G5

2-Way N.C. Free Vent (with 1.26 Conduit Option) solenoid valve, with 36" tape-wrapped coil, lead-wired, non-standard length, 316 stainless steel body, perfluoroelastomer plunger seal, perfluoroelastomer o-ring, 1/8-27 NPT female thread, operating at 12 VDC, and includes a one piece 316 stainless steel guide assembly option.

Alternate 1/2" Conduit Housing

Available on all body configurations

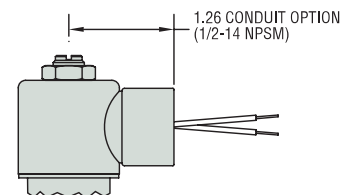

Part Prefix Table ①

	Orifice		MOPD (psig)	C _v		① Primary Prefix	
	Body	Stop		Body	Stop	Grommet Housing	Conduit Housing
2-WAY N.C.	1/16	—	400	0.065	—	B2011	B2021
	5/64	—	300	0.090	—	B2012	B2022
	3/32	—	250	0.155	—	B2013	B2023
	7/64	—	200	0.200	—	B2014	B2024
	1/8	—	150	0.240	—	B2015	B2025
	5/32	—	100	0.300	—	B2016	B2026
	3/16	—	50	0.430	—	B2017	B2027
2-WAY N.O.	—	1/32	400	—	0.019	B2211	B2221
	—	3/64	300	—	0.040	B2212	B2222
	—	1/16	200	—	0.075	B2213	B2223
	—	5/64	150	—	0.090	B2214	B2224
3-WAY N.C. Free Vent	1/32	1/32	250	0.018	0.018	B3011	B3021
	3/64	3/64	175	0.040	0.040	B3012	B3022
	1/16	1/16	125	0.065	0.070	B3013	B3023
	5/64	5/64	100	0.090	0.090	B3014	B3024
	3/32	5/64	75	0.155	0.090	B3015	B3025
	1/8	5/64	50	0.240	0.090	B3016	B3026
	5/32	5/64	15	0.300	0.090	B3017	B3027
3-WAY N.C. Line Connection	1/32	1/32	250	0.018	0.018	B3111	B3121
	3/64	3/64	175	0.040	0.040	B3112	B3122
	1/16	1/16	125	0.065	0.070	B3113	B3123
	5/64	5/64	100	0.090	0.090	B3114	B3124
	3/32	5/64	75	0.155	0.090	B3115	B3125
	1/8	5/64	50	0.240	0.090	B3116	B3126
	5/32	5/64	15	0.300	0.090	B3117	B3127
3-WAY N.O.	1/32	1/32	200	0.018	0.018	B3211	B3221
	3/64	3/64	150	0.040	0.040	B3212	B3222
	1/16	1/16	125	0.065	0.070	B3213	B3223
	5/64	5/64	100	0.090	0.090	B3214	B3224
	3/32	5/64	75	0.155	0.090	B3215	B3225
	1/8	5/64	50	0.240	0.090	B3216	B3226
	5/32	5/64	15	0.300	0.090	B3217	B3227
3-WAY Multi Purpose	1/32	1/32	175	0.018	0.018	B3311	B3321
	3/64	3/64	125	0.040	0.040	B3312	B3322
	1/16	1/16	100	0.065	0.070	B3313	B3323
	5/64	5/64	75	0.090	0.090	B3314	B3324
	3/32	5/64	50	0.155	0.090	B3315	B3325
	1/8	5/64	25	0.240	0.090	B3316	B3326
	5/32	5/64	15	0.300	0.090	B3317	B3327
3-WAY Directional Control	1/32	1/32	275	0.018	0.018	B3411	B3421
	3/64	3/64	200	0.040	0.040	B3412	B3422
	1/16	1/16	150	0.065	0.070	B3413	B3423
	5/64	5/64	100	0.090	0.090	B3414	B3424
	3/32	5/64	75	0.155	0.090	B3415	B3425
	1/8	5/64	50	0.240	0.090	B3416	B3426
	5/32	5/64	25	0.300	0.090	B3417	B3427

② Coil Construction

(blank) = Tape-wrapped, Class-B, with 18" lead wires*

W___ = Tape-wrapped coil, lead-wires, non-standard length (specify length)

1M = Over molded coil, Class-B, lead-wires

2M = Over molded coil, Class-F, lead-wires

3M = Over molded coil, Class-H, lead-wires

4M = Over molded coil, Class-B, 1/4" spade terminals

5M = Over molded coil, Class F, 1/4" spade terminals

6M = Over molded coil Class H, 1/4" spade terminals

4 = Encapsulated coil, Class-B, 3/16" spade terminals

5 = Encapsulated coil, Class-B, 0.110" spade terminals

8 = Encapsulated coil, Class F, 3/16" spade terminals

10 = Externally rectified coil (lead wires only)

11 = Tape-wrapped coil, Class H, lead wires

② Coil Construction, continued

HC = molded coil, Class F, EN175301-803 Form B DIN, Industrial, 11mm, 2+1 poles

HC2 = Encapsulated coil, Class B, EN175301-803 Form C DIN, Industrial, 9.4mm, 2+1 poles

TK = Higher efficiency coil (2-way N.C. only)

③ Body Material

(blank) = 303 Stainless Steel*

BB = Brass

SB = 304 Stainless Steel

SB5 = 316 Stainless Steel

SBF = 430F Stainless Steel

④ Plunger Seal Material

(blank) = Nitrile*

E = EPR

GV = Gasoline Viton®

(2-way N.C. only)

N = Neoprene

NS = Nitrile (NSF/FDA material)

PF = Perfluoroelastomer

R = Rulon® (2-way N.C. only)

T = PTFE

V = Viton®

⑤ O-Ring Material

(blank) = Nitrile*

EO = EPR

NO = Neoprene

NSO = Nitrile (NSF/FDA material)

PFO = Perfluoroelastomer

TO = PTFE

VO = Viton®

⑥ Body Port Configuration

(blank) = 1/8-27 NPT female thread*

LB = 1/4-18 NPT female thread

BD = #10-32 female straight thread (max. orifice = 1/8")

LT = 1/8-28 BSPT female thread

LU = 1/4-19 BSPT female thread (2-way N.C. only)

MM = Manifold mount (1/4-28 UNF-2A mounting stud)†††

MM3 = Manifold mount (5/16-24 UNF-2A mounting stud)†††

OB = Omit body (operator style)

MB = Bottom metering (2-way N.C. only)

BI = Bottom over-seat port, female thread (max. orifice = 1/8")

BIM = Bottom over-seat port, 1/8-27 NPT male thread (max. orifice = 5/64", brass body only)

BO = Bottom under-seat port, female thread

BOM = Bottom under-seat port, 1/8-27 NPT male thread (max. orifice = 1/8", brass body only)

RL = 90° porting - left hand

RR = 90° porting - right hand

BS = Stop port, #10-32 female straight thread

⑦ Voltage†† (see note below)

___VDC = DC (specify DC voltage)

___VAC = AC (specify AC voltage; includes copper shading ring)

⑧ Additional Options

Y = Yoke (2-way N.C. only)

WM = Mounting bracket

TP = PTFE coated plunger

QO = Quiet operation (2-way N.C. only)

S = Silver shading ring

OC = Cleaned for oxygen use

VAC = Vacuum application (0 to 29.5" Hg)

G1 = One-piece 303 Stainless Steel guide assembly

(standard on 2-way normally open and all 3-way valves)

G5 = One piece 316 Stainless Steel guide assembly

SH = 1" Diameter housing, grommet

SC = 1" Diameter housing, conduit

* Standard selection; will be used unless otherwise specified. Standard selections are not referenced in final part number.

† Internal rectified available. Consult factory.

†† Can be AC rectified without shading ring. Use coil construction Code 10.

††† Teflon® o-ring not suitable for manifold mount.

C Series – High Flow

- ▶ MOPD: 400 PSI
- ▶ C_v Range: 0.019 to 0.420
- ▶ 7 Watts


The C Series, available only in brass, is a highly durable miniature 2- or 3-way direct acting valve for applications that require a higher flow control. The C Series also utilizes a larger diameter body and larger port connections for higher C_v valves rates. The free machining brass body allows for fast and precise machining, translating into lower product costs as compared to stainless steel. Design engineers appreciate the quality inherent in solid brass components.

Typical Applications


- Therapeutic Beds
- Automotive Applications
- Packaging Equipment

Dimensions


Threaded Port Body

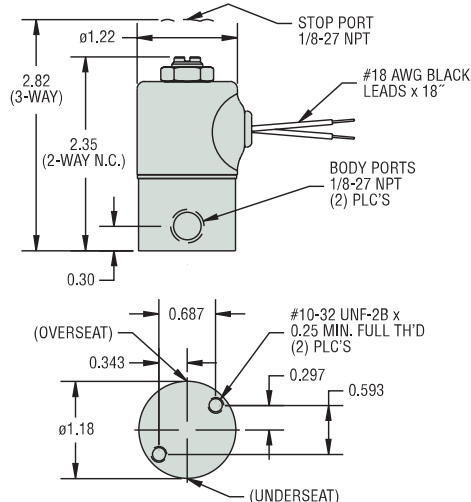


Manifold Mount Body

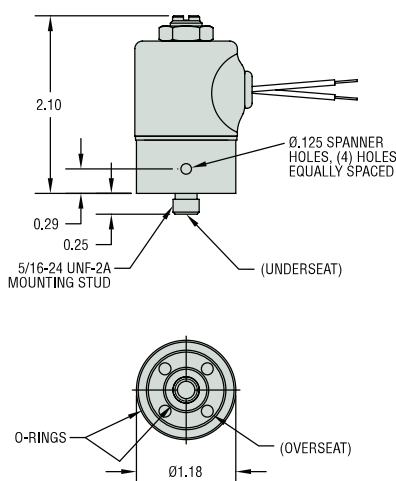

MANIFOLD MATING DIMENSIONS

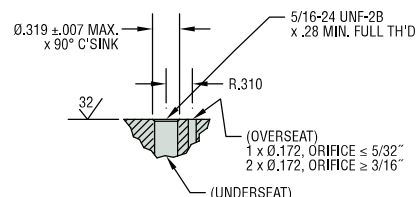

Alternate 1/2" Conduit Housing Available on all body configurations

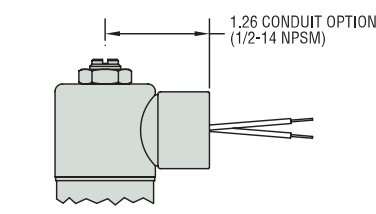

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

C2016	-	11	-	E	-	EO	-	LB	-	48VDC	-	VAC		
1		2		3		4		5		6		7		8
Primary Prefix		Coil Construction		Body Material*		Plunger Seal Material		O-Ring Material		Body Port Configuration		Voltage		Additional Options

* Blank entry indicates a "Standard" selection (Brass, in this case).

Example:

C2016-11-E-EO-LB-48VDC-VAC

2-Way N.C. solenoid valve, with tape-wrapped coil, Class-H, lead-wires, brass body, EPR plunger seal, EPR o-ring, 1/4-18 NPT female thread, operating at 48 VDC, and includes a vacuum application (0 to 29.5" Hg) option.



Part Prefix Table ①

	Orifice		MOPD (psig)	C _v		① Primary Prefix	
	Body	Stop		Body	Stop	Grommet Housing	Conduit Housing
2-WAY N.C.	1/16	—	400	0.080	—	C2011	C2021
	7/64	—	200	0.180	—	C2012	C2022
	1/18	—	150	0.240	—	C2013	C2023
	5/32	—	100	0.300	—	C2014	C2024
	3/16	—	75	0.360	—	C2015	C2025
	7/32	—	40	0.420	—	C2016	C2026
2-WAY N.O.	—	1/32	400	—	0.019	C2211	C2221
	—	3/64	300	—	0.040	C2212	C2222
	—	1/16	200	—	0.075	C2213	C2223
	—	5/64	150	—	0.105	C2214	C2224
3-WAY N.C. Free Vent	1/16	1/16	125	0.080	0.075	C3011	C3021
	5/64	5/64	100	0.105	0.105	C3012	C3022
	1/8	5/64	50	0.240	0.105	C3013	C3023
	3/16	5/64	25	0.360	0.105	C3014	C3024
	7/32	5/64	VAC	0.420	0.105	C3015	C3025
3-WAY N.C. Line Connection	1/16	1/16	125	0.080	0.075	C3111	C3121
	5/64	5/64	100	0.105	0.105	C3112	C3122
	1/8	5/64	50	0.240	0.105	C3113	C3123
	3/16	5/64	25	0.360	0.105	C3114	C3124
	7/32	5/64	VAC	0.420	0.105	C3115	C3125
3-WAY N.O.	1/16	1/16	125	0.080	0.075	C3211	C3221
	5/64	5/64	100	0.105	0.105	C3212	C3222
	1/8	5/64	75	0.240	0.105	C3213	C3223
	3/16	5/64	40	0.360	0.105	C3214	C3224
	7/32	5/64	VAC	0.420	0.105	C3215	C3225
3-WAY Multi Purpose	1/16	1/16	100	0.080	0.075	C3311	C3321
	5/64	5/64	75	0.105	0.105	C3312	C3322
	1/8	5/64	25	0.240	0.105	C3313	C3323
	3/16	5/64	10	0.360	0.105	C3314	C3324
	7/32	5/64	5	0.420	0.105	C3315	C3325
3-WAY Directional Control	1/16	1/16	150	0.080	0.075	C3411	C3421
	5/64	5/64	100	0.105	0.105	C3412	C3422
	1/8	5/64	50	0.240	0.105	C3413	C3423
	3/16	5/64	25	0.360	0.105	C3414	C3424
	7/32	5/64	5	0.420	0.105	C3415	C3425

② Coil Construction

(blank) = Tape-wrapped, Class-B, with 18~ lead-wires*

W__ = Tape-wrapped coil, lead-wires, non-standard length
(specify in inches)

1 = Encapsulated coil, Class-B, lead-wires

3 = Encapsulated coil, Class-H, lead-wires

4 = Encapsulated coil, Class-B, 1/4~ spade terminals
(3/16~ spade optional)

10 = Externally rectified coil (lead-wires only)

11 = Tape-wrapped coil, Class-H, lead-wires

HC2 = Encapsulated coil, Class-B, EN175301-803
Style C, Industrial, 9.4mm, 2+1 poles

③ Body Material

(blank) = Brass*

SB = 304 Stainless Steel

SB1 = 303 Stainless Steel

SB5 = 316 Stainless Steel

SBF = 430F Stainless Steel

④ Plunger Seal Material

(blank) = Nitrile*

E = EPR

GV = Gasoline Viton® (2-way N.C. only)

N = Neoprene

NS = Nitrile (NSF/FDA material)

PF = Perfluoroelastomer

R = Rulon® (2-way N.C. only)

T = PTFE

V = Viton®

⑤ O-Ring Material

(blank) = Nitrile*

EO = EPR

NO = Neoprene

NSO = Nitrile (NSF/FDA material)

PFO = Perfluoroelastomer

TO = PTFE

VO = Viton®

⑥ Body Port Configuration

(blank) = 1/8-27 NPT female thread*

LB = 1/4-18 NPT female thread

BD = #10-32 female straight thread

(2-way N.C. only, max. orifice = 1/8")

LU = 1/4-19 BSPT female thread (2-way N.C. only)

OB = Omit body (operator style)

BO = Bottom under-seat port, female thread

RL = 90° porting - left hand

RR = 90° porting - right hand

MM4 = Manifold mount (5/16-24 UNF-2A mounting stud)^{††}

BS = Stop port, #10-32 female straight thread

⑦ Voltage[†] (see note below)

___ VDC = DC (specify voltage)

___ VAC = AC (specify voltage; includes copper shading ring)

⑧ Additional Options

WM = Mounting bracket

TP = PTFE coated plunger

QO = Quiet operation (2-way normally closed valves only)

S = Silver shading ring

OC = Cleaned for oxygen use

VAC = Vacuum application (0 to 29.5~ Hg)

G1 = One-piece 303 Stainless Steel guide assembly

(standard on 2-way normally open and all 3-way valves)

G5 = One piece 316 Stainless Steel guide assembly

* Standard selection; will be used unless otherwise specified.
Standard selections are not referenced in final part number.[†] Can be AC rectified without shading ring. Use coil construction Code 10.^{††} Teflon® o-ring not suitable for manifold mount.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

D Series – High Flow

- ▶ MOPD: 900 PSI
- ▶ C_v Range: 0.045 to 0.880
- ▶ 10 Watts


For maximum flow in a miniature solenoid valve the D Series valves delivers a wide range of C_v values and maximum operating pressures. The D Series is also available in multiple body materials, seal materials, coil constructions, voltages, and wattages. Proven to perform for millions of cycles without failure, the D valve—as with the entire valve series—is ideal for manifold configurations, sub-assemblies, and complete fluidic systems. The D Series is the largest in a progression—A Series, B Series, and C Series—of the highly flexible, modular design, (general purpose) valves.

Typical Applications


- Agriculture
- Defense
- Sterilization Equipment
- Industrial Automation

Dimensions


Threaded Port Body

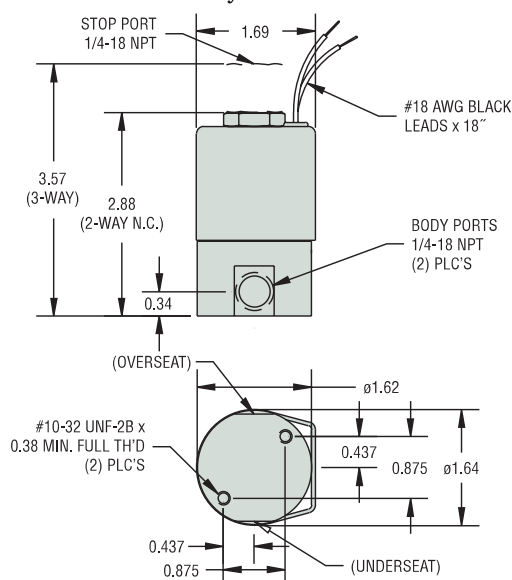

Manifold Mount Body

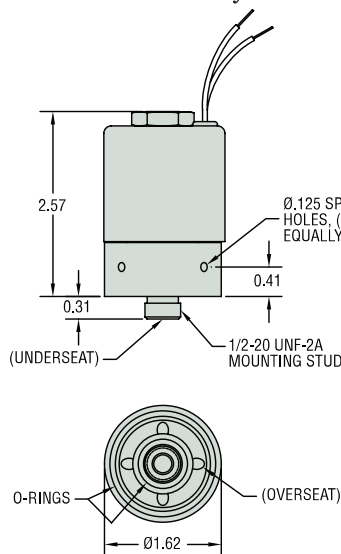


MANIFOLD MATING DIMENSIONS

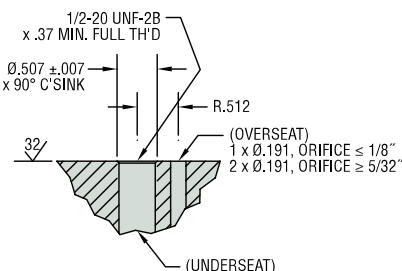


Alternate 1/2" Conduit Housing

Available on all body configurations

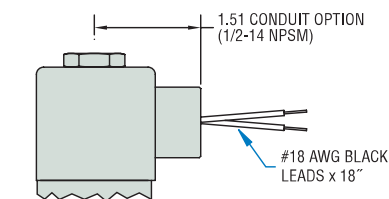

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

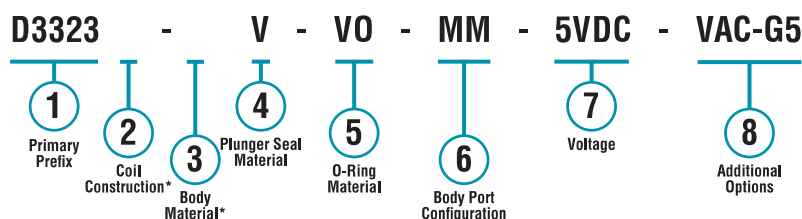

* Blank entry indicates a "Standard" selection
(Tape-wrapped, Class-B, with 18" lead-wires and 430F Stainless Steel, in this case).

Example:

D3323-V-VO-MM-5VDC-VAC-G5

3-Way Multi Purpose (with 1.26 Conduit Option) solenoid valve, with tape-wrapped, Class-B, with 18" lead-wires, 430F stainless steel body, Viton® plunger seal, Viton® o-ring, manifold mount (1/2-20 UNF-2A mounting stud, max. orifice = 14"), operating at 5 VDC, and includes vacuum application (0 to 29.5" Hg) and one piece 316 stainless steel guide assembly options.



Part Prefix Table ①

	Orifice		MOPD (psig)	C _v		① Primary Prefix	
	Body	Stop		Body	Stop	Grommet Housing	Conduit Housing
2-WAY N.C.	3/64	—	900	0.045	—	D2011	D2021
	1/16	—	650	0.080	—	D2012	D2022
	3/32	—	350	0.150	—	D2013	D2023
	1/8	—	225	0.210	—	D2014	D2024
	5/32	—	130	0.380	—	D2015	D2025
	3/16	—	85	0.430	—	D2016	D2026
	1/4	—	50	0.700	—	D2017	D2027
	5/16	—	20	0.850	—	D2018	D2028
2-WAY N.O.	3/8	—	10	0.880	—	D2019	D2029
	—	3/64	900	—	0.045	D2211	D2221
	—	1/16	550	—	0.080	D2212	D2222
	—	5/64	300	—	0.110	D2213	D2223
	—	3/32	175	—	0.150	D2214	D2224
3-WAY N.C. Free Vent	—	1/8	110**	—	0.210	D2215	D2225
	—	5/32	60**	—	0.380	D2216	D2226
	1/16	1/16	175	0.080	0.080	D3011	D3021
	5/64	5/64	150	0.110	0.110	D3012	D3022
	3/32	3/32	125	0.150	0.150	D3013	D3023
3-WAY N.C. Line Connection	1/8	1/8	85**	0.210	0.210	D3014	D3024
	5/32	5/32	45**	0.380	0.380	D3015	D3025
	3/16	5/32	30**	0.430	0.380	D3016	D3026
	1/4	5/32	10**	0.700	0.380	D3017	D3027
	1/16	1/16	175	0.080	0.080	D3111	D3121
3-WAY N.O.	5/64	5/64	150	0.110	0.110	D3112	D3122
	3/32	3/32	125	0.150	0.150	D3113	D3123
	1/8	1/8	85**	0.210	0.210	D3114	D3124
	5/32	5/32	45**	0.380	0.380	D3115	D3125
	3/16	5/32	30**	0.430	0.380	D3116	D3126
3-WAY Multi Purpose	1/4	5/32	10**	0.700	0.380	D3117	D3127
	1/16	1/16	200	0.080	0.080	D3211	D3221
	5/64	5/64	175	0.110	0.110	D3212	D3222
	3/32	3/32	150	0.150	0.150	D3213	D3223
	1/8	1/8	100**	0.210	0.210	D3214	D3224
3-WAY Directional Control	5/32	5/32	50**	0.380	0.380	D3215	D3225
	3/16	5/32	35**	0.430	0.380	D3216	D3226
	1/4	5/32	15**	0.700	0.380	D3217	D3227
	1/16	1/16	160	0.080	0.080	D3311	D3321
	5/64	5/64	130	0.110	0.110	D3312	D3322
3-WAY Directional Control	3/32	3/32	110	0.150	0.150	D3313	D3323
	1/8	1/8	75**	0.210	0.210	D3314	D3324
	5/32	5/32	40**	0.380	0.380	D3315	D3325
	3/16	5/32	25**	0.430	0.380	D3316	D3326
	1/4	5/32	10**	0.700	0.380	D3317	D3327
3-WAY Directional Control	1/16	1/16	225	0.080	0.080	D3411	D3421
	5/64	5/64	185	0.110	0.110	D3412	D3422
	3/32	3/32	150	0.150	0.150	D3413	D3423
	1/8	1/8	110**	0.210	0.210	D3414	D3424
	5/32	5/32	60**	0.380	0.380	D3415	D3425
3-WAY Directional Control	3/16	5/32	40**	0.430	0.380	D3416	D3426
	1/4	5/32	20**	0.700	0.380	D3417	D3427

** DC or rectified coil only

② Coil Construction

(blank) = Tape-wrapped, Class-B, with 18~ lead-wires*

W__ = Tape-wrapped coil, lead-wires, non-standard length (specify in inches)

1 = Encapsulated coil, Class-B, lead-wires

2 = Molded coil, Class-F, lead-wires

3 = Encapsulated coil, Class-H, lead-wires

4 = Encapsulated coil, Class-B, 1/4~ spade terminals

10 = Externally rectified coil (lead-wires only)

11 = Tape-wrapped coil, Class-H, lead-wires

HC = Encapsulated coil, Class-B, EN175301-803 Style A, Industrial, 18mm, 2+1 poles

HC2 = Encapsulated coil, Class-B, EN175301-803 Style C, Industrial, 9.4mm, 2+1 poles

③ Body Material

(blank) = 430F Stainless Steel*

BB = Brass

SB1 = 303 Stainless Steel

SB5 = 316 Stainless Steel

④ Plunger Seal Material

(blank) = Nitrile*

E = EPR

GV = Gasoline Viton® (2-way normally open and 3-way valves max. orifice = 3/32~)

N = Neoprene (2-way normally closed valves only, max. orifice = 1/4~)

NS = Nitrile (NSF/FDA, max. orifice = 1/4~)

PF = Perfluoroelastomer (max. orifice = 1/4~)

R = Rulon® (2-way normally closed valves only, max. orifice = 1/4~)

T = PTFE (max. orifice = 1/4~)

V = Viton®

⑤ O-Ring Material

(blank) = Nitrile*

EO = EPR

NO = Neoprene

NSO = Nitrile (NSF/FDA, 2-way valves only)

PFO = Perfluoroelastomer

TO = PTFE

VO = Viton®

⑥ Body Port Configuration

(blank) = 1/4-18 NPT female thread*

LC = 1/8-27 NPT female thread (max. orifice = 5/16~)

LD = 3/8-18 NPT female thread

LT = 1/8-28 BSPT female thread (max. orifice = 5/16~)

LU = 1/4-19 BSPT female thread

MM = Manifold mount (1/2-20 UNF-2A mounting stud, max. orifice = 1/4~)††

OB = Omit body (operator style)

BI = Bottom over-seat port, female thread (max. orifice = 1/4~)

BO = Bottom under-seat port, female thread

⑦ Voltage† (see note below)

___VDC = DC (specify voltage)

___VAC = AC (specify voltage; includes copper shading ring)

⑧ Additional Options

WM = Mounting bracket on the coil housing

TP = PTFE coated plunger

CP = Chamfered plunger

QO = Quiet operation (2-way valves only)

S = Silver shading ring

OC = Cleaned for oxygen use

VAC = Vacuum application (0 to 29.5~ Hg)

G5 = One piece 316 Stainless Steel guide assembly

* Standard selection; will be used unless otherwise specified. Standard selections are not referenced in final part number.

† Can be AC rectified without shading ring. Use coil construction Code 10.

†† Teflon® o-ring not suitable for manifold mount.

AS Series

- ▶ MOPD: 110 PSI (Plastic Body) or 150 PSI (Metal Body)
- ▶ C_v Range: 0.020 to 0.300
- ▶ 4.5 Watts (Plastic Body) or 7 Watts (Metal Body)


The AS Series is a 2-way isolation valve, designed to control the flow of various aggressive liquids and gases with several body and diaphragm materials. With a modular design, the AS offers performance flexibility and the protection your media needs from the solenoid's internal components. Numerous port configurations, voltage options, and coil constructions enable the AS Series to be a truly versatile miniature inert isolation valve, easily integrated into any complex or demanding system.

Typical Applications



- Analytical Instruments
- Clinical Diagnostic Analyzers
- Bio-Instrumentation

Dimensions

Threaded Port Body

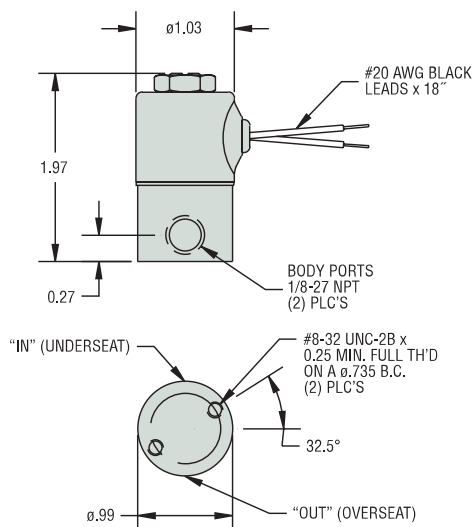

Manifold Mount Body

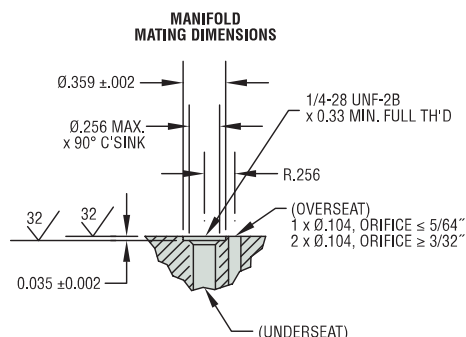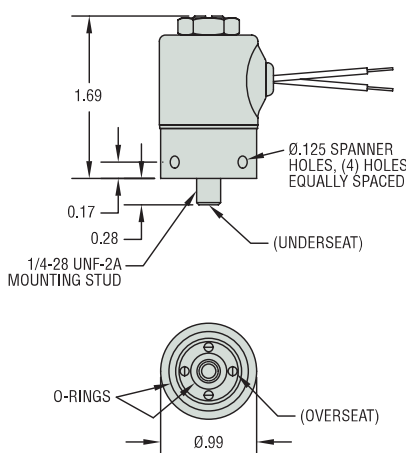

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

AS2022 - 10 - SB - NS - BD - 110/50/60VAC - WM

1

Primary Prefix

2

Coil Construction

3

Body Material

4

Diaphragm Seal Material

5

Body Port Configuration

6

Voltage

7

Additional Options

Example:

AS2022-10-SB-NS-BD-110/50/60VAC-WM


2-Way N.C. (1/2" conduit housing) solenoid valve, with externally rectified coil (lead-wires only), 304 stainless steel body, nitrile (NSF/FDA) diaphragm seal, #10-32 female straight thread, operating at 110/50/60 Volt AC with rectified coil and mounting bracket.

Notes

1. After the Primary Prefix, any "-Code" may be blank when standard (blank) selections are specified.
2. The Body Material option code, when specified, supercedes the standard body material indicated by the Primary Prefix.



Alternate 1/2" Conduit Housing Available on all body configurations

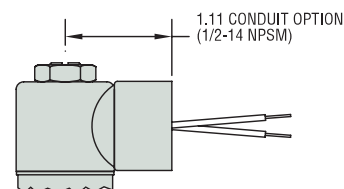

Part Prefix Table ①

Body Material	Orifice	MOPD (psig)	Max Back Pressure	C _v	① Primary Prefix	
	Body				Grommet Housing	Conduit Housing
303 Stainless Steel [†]	1/32	150	10	0.020	AS2011	AS2021
	3/64	110	10	0.035	AS2012	AS2022
	1/16	90	10	0.065	AS2013	AS2023
	5/64	70	10	0.090	AS2014	AS2024
	3/32	45	10	0.155	AS2015	AS2025
	1/8	15	5	0.240	AS2016	AS2026
	5/32	5	5	0.300	AS2017	AS2027
Polypropylene (1/8-27 NPT Female Thread body port only)	3/64	110	10	0.035	AS2032	AS2042
	1/8	15	10	0.240	AS2036	AS2046

* Other body orifice sizes may be available, consult factory.

③ Coil Construction

(blank) = Tape-wrapped, Class-B, with 18~ lead-wires*

W__ = Tape-wrapped coil, lead-wires, non-standard length (specify in inches)

1 = Encapsulated coil, Class-B, lead-wires

2 = Molded coil, Class-F, lead-wires

3 = Encapsulated coil, Class-H, lead-wires

4 = Encapsulated coil, Class-B, 3/16~ spade terminals (1/4~ spade optional)

10 = Externally rectified coil (lead-wires only)

11 = Tape-wrapped coil, Class-H, lead-wires

HC2 = Encapsulated coil, Class-B, EN175301-803 Style C, Industrial, 9.4mm, 2+1 poles

③ Body Material (Replaces Standard 303 SS)

BB = Brass

SB = 304 Stainless Steel

SB5 = 316 Stainless Steel

④ Diaphragm Seal Material

(blank) = Viton® diaphragm*

E = EPR diaphragm

NS = Nitrile (NSF/FDA) diaphragm

PF = Perfluoroelastomer diaphragm

⑤ Body Port Configuration

(blank) = 1/8-27 NPT female thread*

LB = 1/4-18 NPT female thread²

BD = #10-32 female straight thread (max. orifice = 1/8")²

LT = 1/8-28 BSPT female thread²

LU = 1/4-19 BSPT female thread²

MM = Manifold mount (1/4-28 UNF-2A mounting stud)^{2†}

MM3 = Manifold mount (5/16-24 UNF-2A mounting stud)^{2†}

OB = Omit body (operator style)²

BI = Bottom over-seat port, female thread (max. orifice = 1/8")²

BIM = Bottom over-seat port, 1/8-27 NPT male thread (max. orifice = 5/64", brass body only)²

BO = Bottom under-seat port, female thread²

BOM = Bottom under-seat port, 1/8-27 NPT male thread (max. orifice = 1/8", brass body only)²

RL = 90° porting - left hand²

RR = 90° porting - right hand²

⑥ Voltage

__VDC = DC (specify voltage)

__VAC = AC Rectified only (specify voltage)

⑦ Additional Options

Y = Yoke

WM = Mounting bracket

OC = Cleaned for oxygen use

* Standard selection; will be used unless otherwise specified. Standard selections are not referenced in final part number.

Notes

1. Use Prefixes from these rows if you want to use any of the other Body Materials listed under selection ③. Simply add the respective material code in the 3rd part number position (See Example).
2. Not available with Polypropylene bodies.

† Teflon® o-ring not suitable for manifold mount.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

BS Series – Higher Flow

- ▶ MOPD: 150 PSI (Plastic Body) or 150 PSI (Metal Body)
- ▶ C_v Range: 0.035 to 0.300
- ▶ 4.5 Watts (Plastic Body) or 7 Watts (Metal Body)


The BS Series is a 2-way, high flow, isolation valve that is designed to be virtually impervious to chemical attack and to protect high purity media. When your media cannot come in contact with any metallic materials, this highly versatile, modular valve delivers the protection you need for accurate and reliable flow control for millions of cycles. With a variety of body, and diaphragm materials, plus numerous port configurations, voltage options, and coil constructions, the BS Series is truly a miniature inert isolation valve that can be built to your exact applications requirements.

Typical Applications


- Remediation Equipment
- Clinical Chemistry Equipment
- Analytical Instrumentation

Dimensions


Threaded Port Body

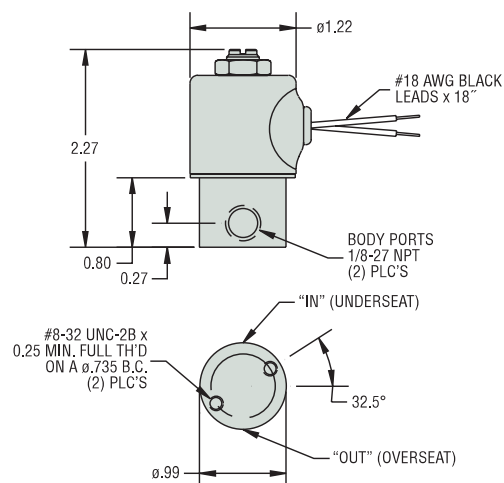


Manifold Mount Body

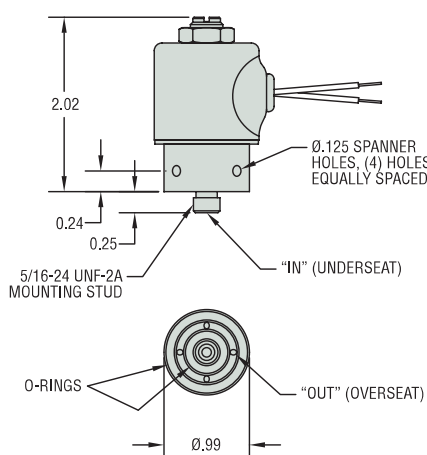

MANIFOLD MATING DIMENSIONS

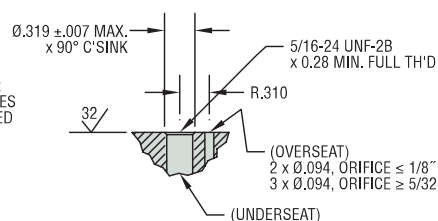


Alternate 1/2" Conduit Housing Available on all body configurations

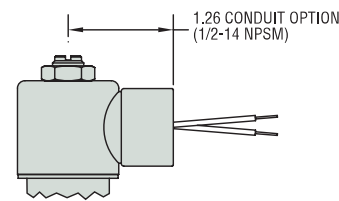

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

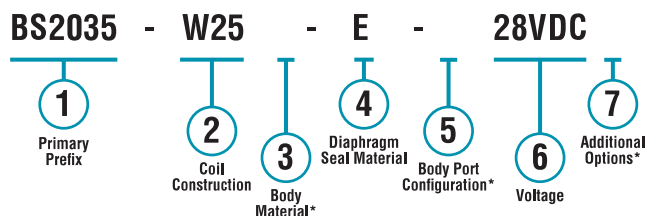

* Blank entry indicates a "Standard" selection (1/8-27NPT female thread, in this case).

Example:

BS2035-W25-E-28VDC

2-Way N.C. Polypropylene (grommet housing, 1/8-27 NPT female thread only) solenoid valve, with 25" tape-wrapped coil, lead-wires, non-standard length, EPR diaphragm seal, 1/8-27 NPT female thread, operating at 28 VDC.



Part Prefix Table ①

Body Material	Orifice	MOPD (psig)	Max Back Pressure	C _v	① Primary Prefix	
	Body				Grommet Housing	Conduit Housing
303 Stainless Steel [†]	3/64	150	15	0.035	BS2010	BS2020
	1/16	110	10	0.065	BS2011	BS2021
	5/64	85	10	0.090	BS2012	BS2022
	3/32	70	10	0.155	BS2013	BS2023
	7/64	25	10	0.200	BS2014	BS2024
	1/8	10	5	0.240	BS2015	BS2025
	5/32	5	5	0.300	BS2016	BS2026
Polypropylene (1/8-27 NPT Female Thread body port only)	3/64	150	15	0.035	BS2030	BS2040
	1/8	10	5	0.240	BS2035	BS2045

* Other body orifice sizes may be available, consult factory.

② Coil Construction

(blank) = Tape-wrapped, Class-B, with 18" lead-wires*

W__ = Tape-wrapped coil, lead-wires, non-standard length (specify in inches)

1 = Encapsulated coil, Class-B, lead-wires

3 = Encapsulated coil, Class-H, lead-wires

4 = Encapsulated coil, Class-B, 1/4" spade terminals (3/16" spade optional)

10 = Externally rectified coil (lead-wires only)

11 = Tape-wrapped coil, Class-H, lead-wires

HC2 = Encapsulated coil, Class-B, EN175301-803 Style C, Industrial, 9.4mm, 2+1 poles

③ Body Material (Replaces Standard 303 SS)

BB = Brass

SB = 304 Stainless Steel

SB5 = 316 Stainless Steel

④ Diaphragm Seal Material

(blank) = Viton® diaphragm*

E = EPR diaphragm

NS = Nitrile (NSF/FDA) diaphragm

PF = Perfluoroelastomer diaphragm

⑤ Body Port Configuration

(blank) = 1/8-27 NPT female thread*

LB = 1/4-18 NPT female thread²

BD = #10-32 female straight thread (max. orifice = 1/8")²

LT = 1/8-28 BSPT female thread²

LU = 1/4-19 BSPT female thread²

MM = Manifold mount (1/4-28 UNF-2A mounting stud)^{†2}

MM3 = Manifold mount (5/16-24 UNF-2A mounting stud)^{†2}

OB = Omit body (operator style)²

BI = Bottom over-seat port, female thread (max. orifice = 1/8")²

BIM = Bottom over-seat port, 1/8-27 NPT male thread

(max. orifice = 5/64", brass body only)²

BO = Bottom under-seat port, female thread²

BOM = Bottom under-seat port, 1/8-27 NPT male thread

(max. orifice = 1/8", brass body only)²

RL = 90° porting - left hand²

RR = 90° porting - right hand²

⑥ Voltage

__VDC = DC (specify voltage)

__VAC = AC Rectified only (specify voltage)

⑦ Additional Options

WM = Mounting bracket

OC = Cleaned for oxygen use

* Standard selection; will be used unless otherwise specified. Standard selections are not referenced in final part number.

Notes

1. Use Prefixes from these rows if you want to use any of the other Body Materials listed under selection ③. Simply add the respective material code in the 3rd part number position (See Example).
2. Not available with Polypropylene bodies.

[†] Teflon® o-ring not suitable for manifold mount.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

4 Steps to Valve Selection

The steps described in this section will help you identify the performance criteria needed to meet your application requirements and select the right valve.

Step 1 – Calculating C_v

Review Step 1 – Calculating C_v on Page J-2.

Step 2 – Valve Function

Identify how your valve will function in your application. Pick from the choices below.


Flow Key

- Blocked Flow
- Free Flow
- Dual Diaphragm/Poppet

Diaphragm
Viton®
EPDM
PTFE
FFKM

Low Dead Volume
Orifice
0.032-0.156 inch

Body
Isoplast™
PPS
PEEK
PTFE
ETFE
PSU

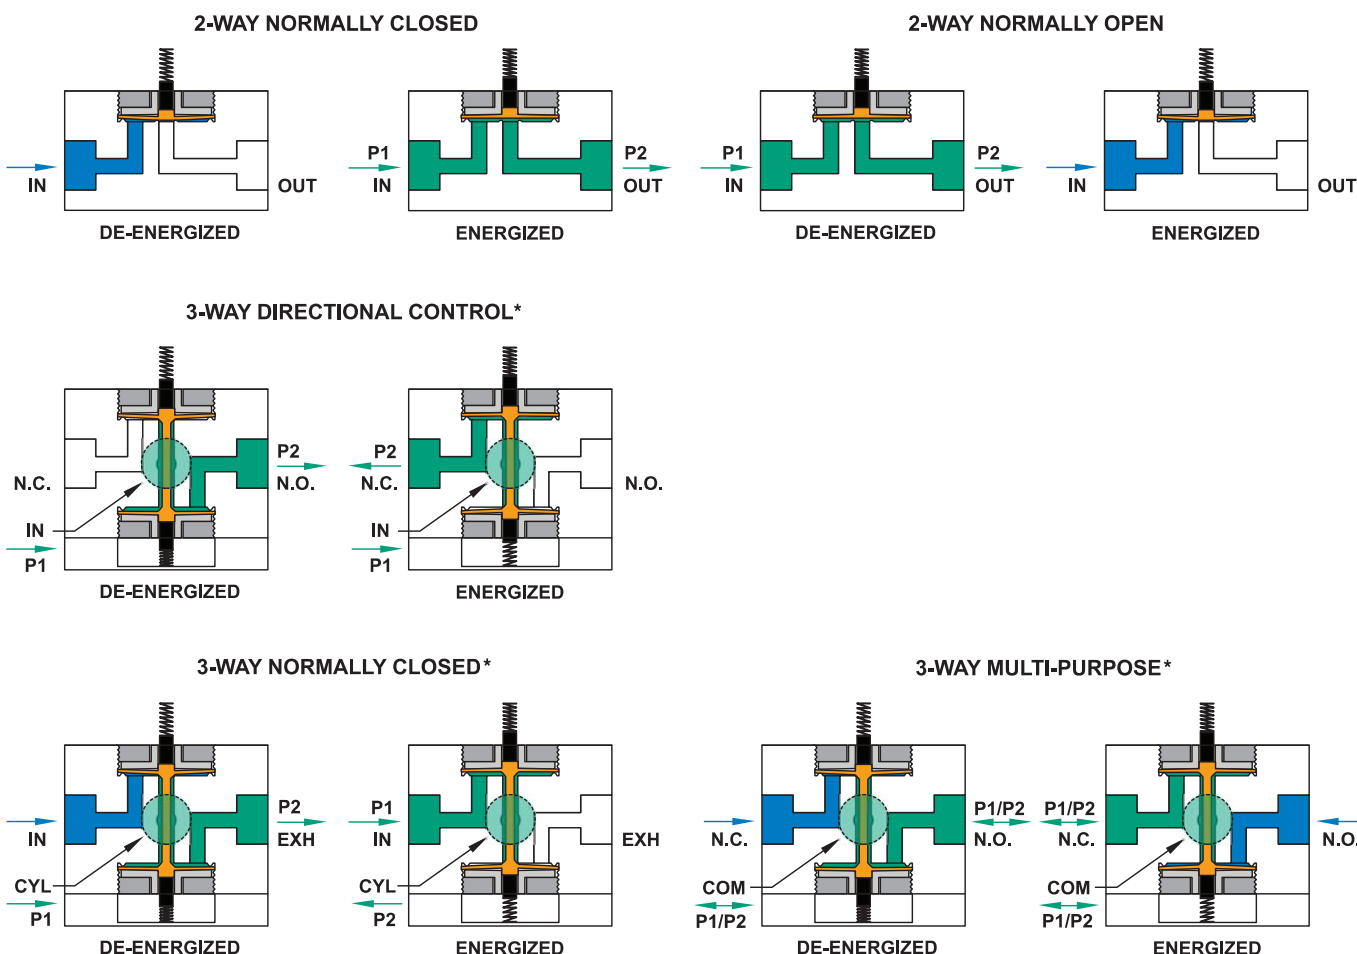

* K-Series 3-way valves are classified as directional control. For alternate uses contact Gems.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

Step 3 – Identify Your Valve Series

Select possible valve series candidate using the overview chart below.

Select maximum operating pressure differential (MOPD), the C_v , function, and additional specifications needed for your application to select possible valve series. The detailed performance specs for each series are located on the corresponding pages listed on the chart.

If you would like assistance with your selection, want to modify a valve, or simply want a sounding board please contact a Gems™ valve engineer at 800-378-1600 or info@gemssensors.com.

	Inert Isolation					
Function	2-Way, Normally Closed		2- & 3-Way		2-Way, Normally Closed	2- & 3-Way
Media	Liquid	Gas & Liquid	Liquid			
Size	Sub-Miniature		Miniature			
C_v Range	0.008 - 0.015	0.016 - 0.040	0.011 - 0.105		0.055 - 0.14	
Port Configuration	1/4"-28 UNF flat bottom, #10-32, 5/16"-24, 1/8" NPT, M6 X 1.0, Manifold Mount	1/8 Barb, Face-Mount, #10-32 Threaded Flat Bottom	1/4"-28 UNF flat bottom, #10-32, 5/16"-24, 1/8" NPT, M6 X 1.0, Tube Mount, Syringe, Manifold Mount		1/4"-28 UNF flat bottom, #10-32, 5/16"-24, 1/8" NPT, M6 X 1.0	
Orifice Dia (in)	0.032 - 0.054	0.032 & 0.052	0.032 - 0.125		0.092	0.156
Power (watt)	1.8	2	2.6, 2.8	4.8	5.1	8
MOPD (psig)	20	70	15 - 50	10 - 60	20	15
Valve Series	KS	Chem-S™	KM	KL	KV	KW
Pages	J-27, J-28	J-25, J-26	J-29, J-30, J-31, J-32	J-29, J-30, J-31, J-32	J-33, J-34	J-33, J-34

Step 4 – Make Your Selection and Configure Your Valve

Complete your valve design by selecting the additional design parameters to build the best possible valve. For example:

- Materials needed for your media (bodies and diaphragms, fluoroelastomer, EPDM, etc.)
- Coil voltage
- Port configuration

For help selecting the additional options for your valve or if you want to confirm that your selection is the best choice or work with an engineer on integrating a fluidic system into your application, contact us at 800-378-1600 or info@gemssensors.com. We are happy to assist. You can also place orders through these same channels.

We specialize in application specific valves. Our modular valve designs, coupled with our cutting edge 3D modeling and innovative CNC manufacturing capabilities, result in fluidic systems that are truly adaptable to any originally manufactured equipment.

Chem-S™ Series – Subminiature

- ▶ MOPD: 70 PSI
- ▶ C_v Range: 0.016 to 0.040
- ▶ 2 Watts


The Chem-S™ utilizes revolutionary diaphragm technology in a liquid compatible, sub-miniature inert isolation valve. With a compact size, flexible diaphragm design, low power consumption, and low cost the Chem-S provides a unique and valuable option for the medical and scientific instrumentation industries. The Chem-S specifically targets the performance and price void between the limited pinch valve and the very expensive rocker style solenoid.

Typical Applications


- Analytical Instrumentation
- Clinical Chemistry Equipment
- Medical Diagnostic and Testing Machinery

Dimensions


Barb Port Body

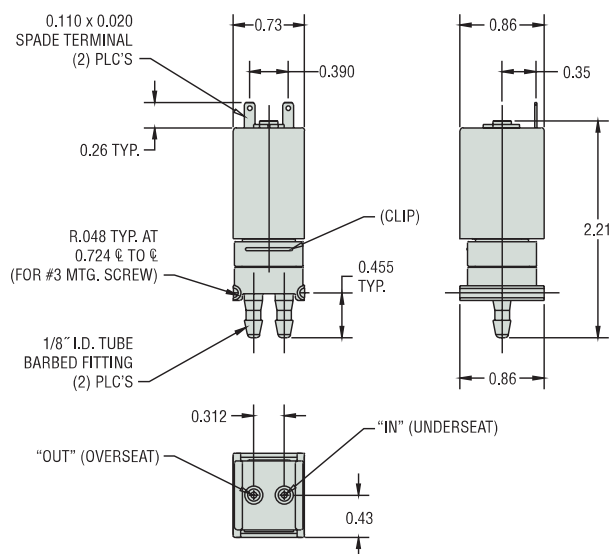

Manifold Mount Body

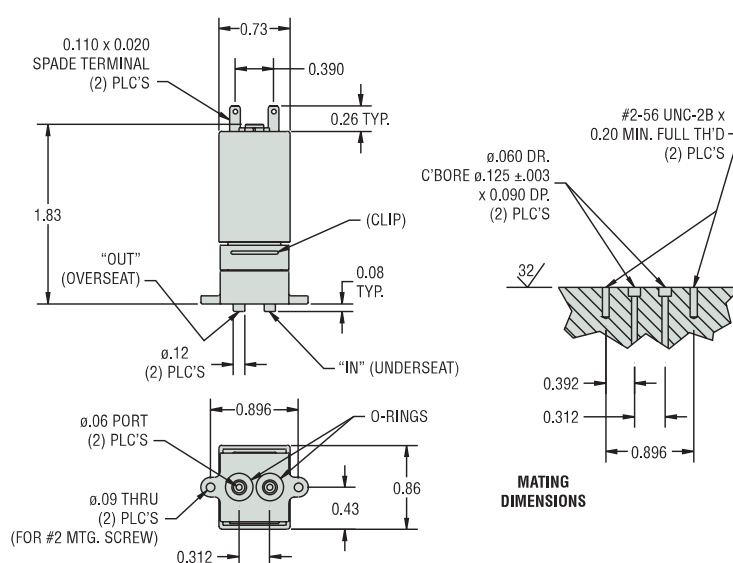


Threaded Port Body

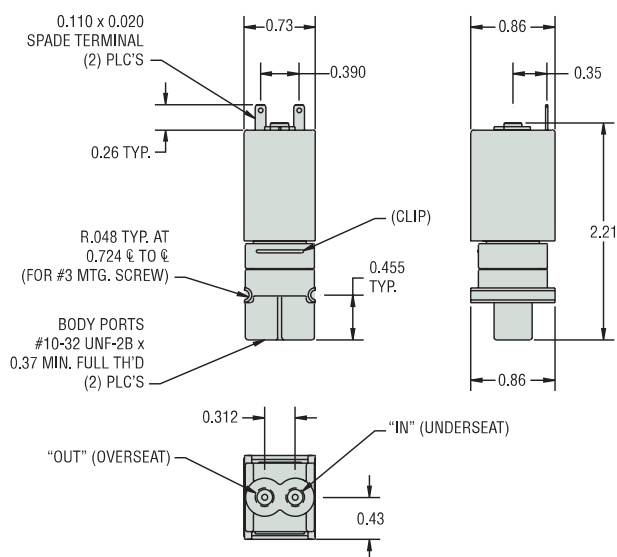

How To Order

Use the **Bold** characters from the choices listed below to construct a product code.

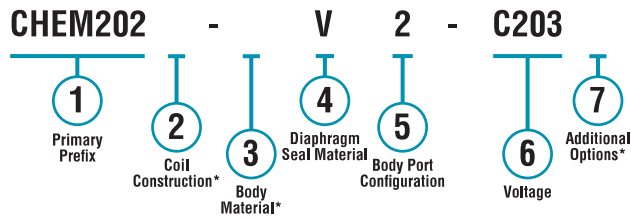

* Blank entry indicates a "Standard" selection
(Quick connect 0.110 spade and Polyurethane (Isoplast™), in this case).

Example:

CHEM202-V2-C203

2-Way N.C. solenoid valve, with quick connect 0.110 spade, polyurethane (Isoplast™) body, Viton® diaphragm seal, manifold mount, operating at 12 VDC.

Part Prefix Table ①

Orifice	MOPD (psig)	C _v	① Primary Prefix
		Body	
0.031	70	0.016	CHEM202
0.052	25	0.040	CHEM205

- ② **Coil Construction**
(blank) = Quick connect 0.110 spade*
- ③ **Body Material**
(blank) = Polyurethane (Isoplast™)*
- ④ **Diaphragm Seal Material**
V = Viton®
E = EPDM
- ⑤ **Body Port Configuration**
1 = 1/8" barb
2 = Manifold mount†
3 = #10-32 flat bottom straight thread ports
- ⑥ **Voltage**
C201 = 5 VDC
C203 = 12 VDC
C204 = 24 VDC
__VDC = DC (specify voltage)

Please Note: Usable for vacuum applications (0-27" Hg). When using for vacuum applications apply vacuum to "IN" port.

* Standard selection; will be used unless otherwise specified.
Standard selections are not referenced in final part number.

† Teflon® o-ring not suitable for manifold mount.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

KS Series – 3/8" (9.53 mm) Solenoids


- ▶ 2-Way, Normally Closed
- ▶ MOPD: 20 PSIG (1.38 bar)
- ▶ C_v Range: 0.008 to 0.015
- ▶ 1.8 Watts

KS Series isolation valves are 2-way, Normally Closed (NC) valves featuring 0.38" (10 mm) solenoid shell diameters. The isolation valve design ensures that the only wetted parts are the valve diaphragm and the valve body. For exceptional chemical compatibility the KS Series utilizes PEEK or PPS bodies, with a choice of diaphragm materials to meet your specific needs.

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

KS201 - P - 4 S1 - C203

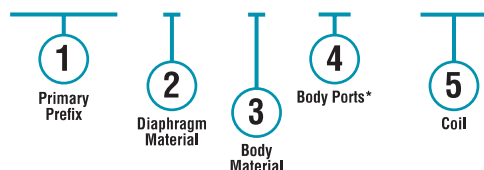

* Combination of Body Port Configuration and Port Thread; Manifold Mount (BM) does **not** use the Thread Size designator

Example:

KS201-P-4 S1-C203

Small 2-Way N.C. Perfluoroelastomer solenoid valve, with a Polyaryletheretherketone body and 1/4"-28 UNF flat bottom threaded side ports, operating at 12 VDC.

Part Prefix Table ①

	Orifice (inch)	MOPD*		C _v	Internal Volume (μl)			① Primary Prefix
		psig	bar		Side Ports	Bottom Ports	Manifold Mount	
2-WAY N.C.	0.032	20	1.38	0.008	20	18	13	KS201
	0.054	20	1.38	0.015	42	35	21	KS203

* Maximum Operational Pressure Differential

② Diaphragm Material

T = PTFE Polytetrafluoroethylene
E = EPDM Ethylene Propylene Diene (M)
P = FFKM Perfluoroelastomer

③ Body Material

3 = PPS Polyphenylene Sulfide
4 = PEEK Polyaryletheretherketone

④ Body Port Configuration

BM = Manifold mount
S_ = Threaded side port
B_ = Threaded bottom port

Port Thread (Used in conjunction with Threaded Port Configurations)

1 = 1/4"-28 UNF flat bottom (Standard)
2 = 10-32
3 = 5/16"-24
4 = 1/8" NPT
5 = M6 X 1,0


⑤ Coil

C203 = 12 VDC
C204 = 24 VDC




Dimensions – Threaded Port Body


Side Port

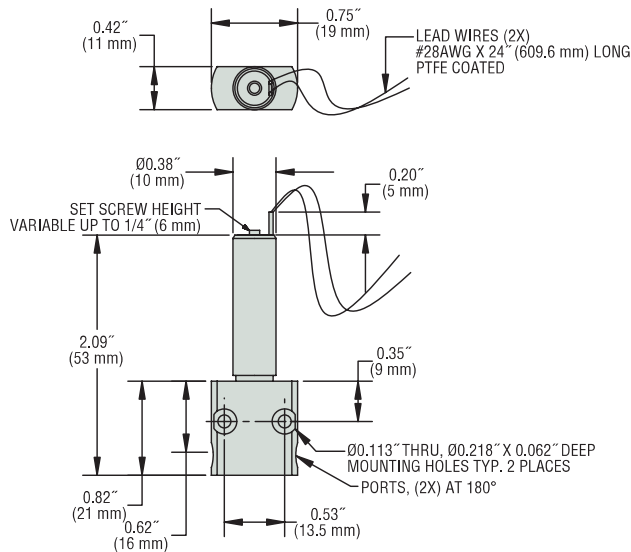


Bottom Port

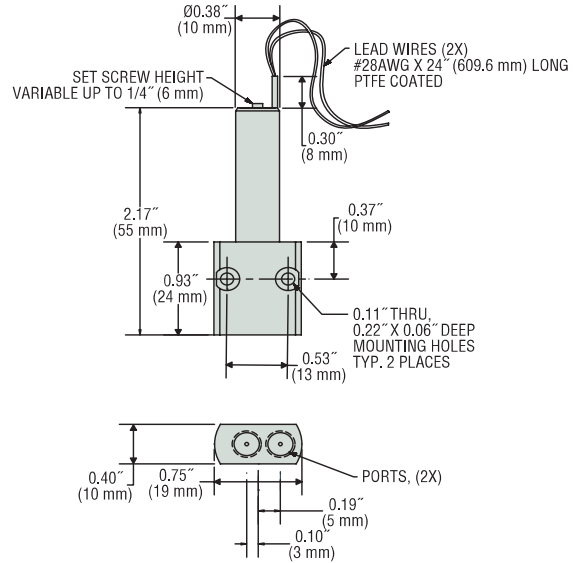

Dimensions – Manifold Mount Body

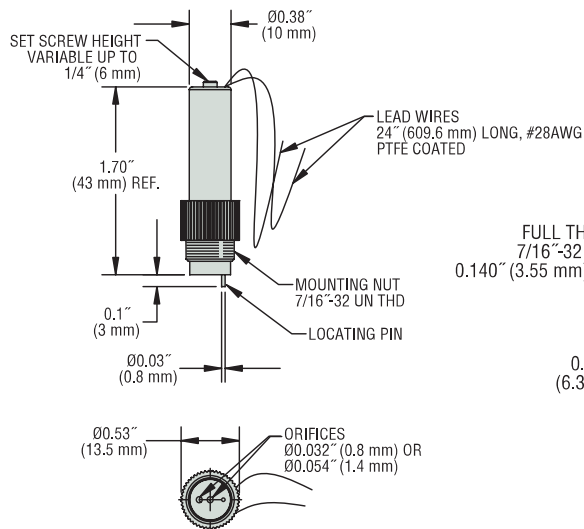

Manifold Preparation

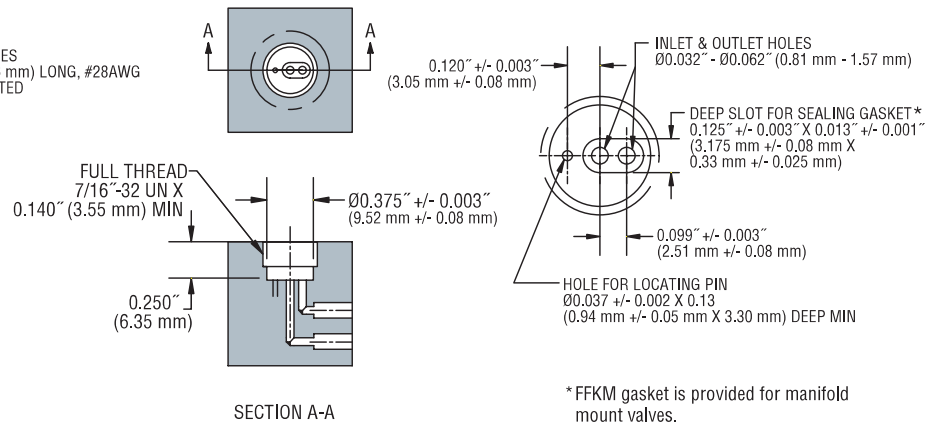

* FFKM gasket is provided for manifold mount valves.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

KM/KL Series – 0.75" (19.05 mm) and 1.0" (25.4 mm) Solenoids

- ▶ 2-Way Normally Open/Closed; 3-Way Directional
- ▶ MOPD: 10 PSIG to 30 PSIG (0.69 bar to 2.07 bar); to 60 PSIG (4.17 bar) on 3-Way
- ▶ C_v Range: 0.011 to 0.105
- ▶ As Low as 2.8 Watts


These isolation valves offer 2-way Normally Open (NO) and Closed (NC), or 3-way Directional Control operation. While sharing similar configurations with the KM Series, the KL Series features larger orifice sizes with greater C_v values. Their design ensures that the only wetted parts are the valve diaphragm and body.

Find Ordering Information on Page J-32.

Dimensions – Tube Mount Body


2-Way, Normally Open (N.O.)

KM Series

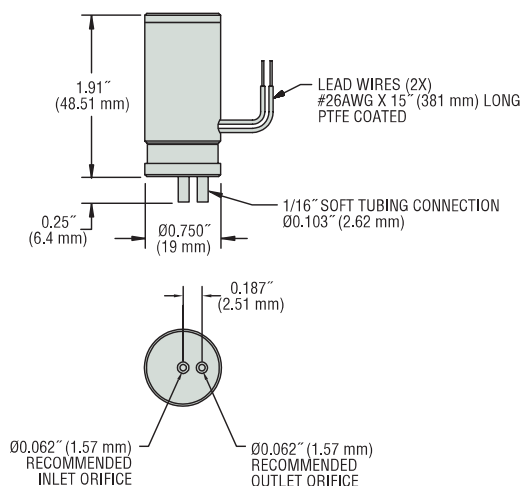

2-Way, Normally Closed (N.C.)


KM Series

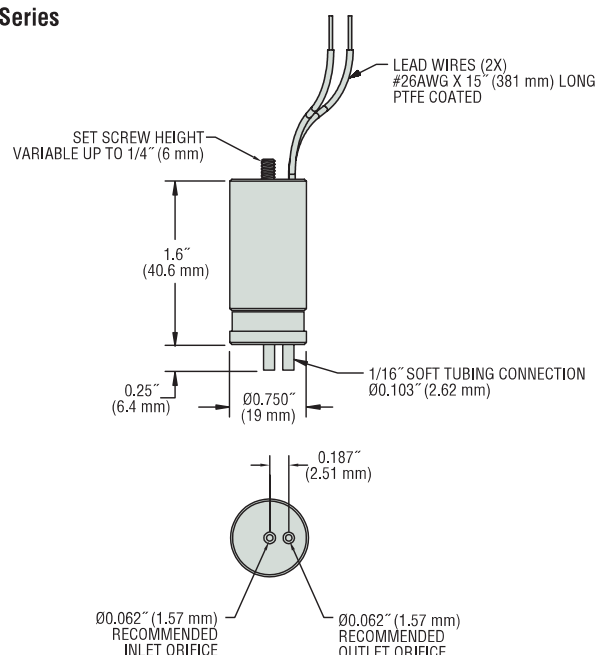


Dimensions – Side Port Body

2-Way, Normally Closed (N.C.)

KM Series

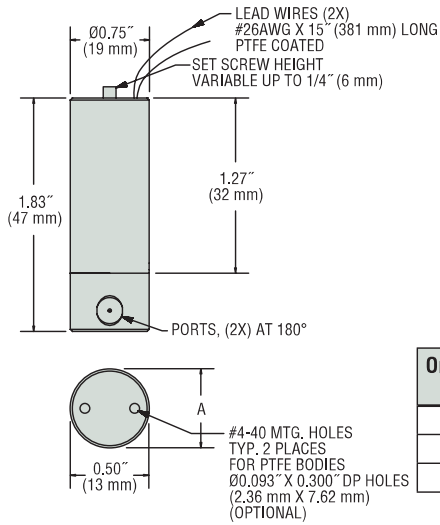


KL Series

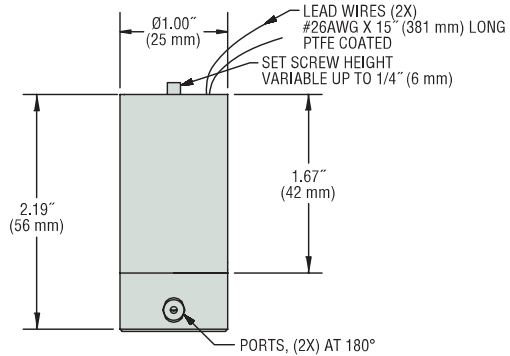


2-Way, Normally Open (N.O.)

KM Series

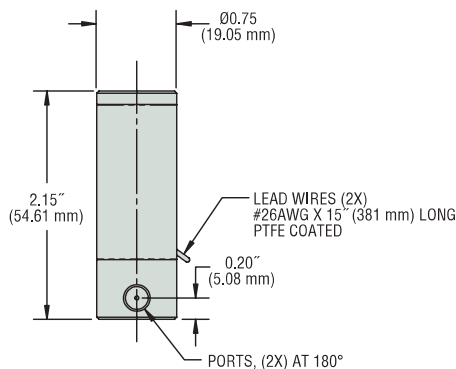


KL Series

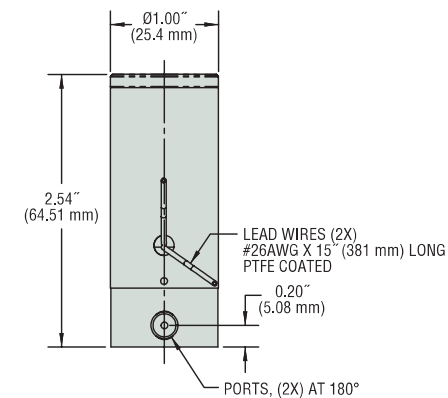


3-Way, Normally Closed (N.C.), Multi-Purpose, Directional Control

KM Series

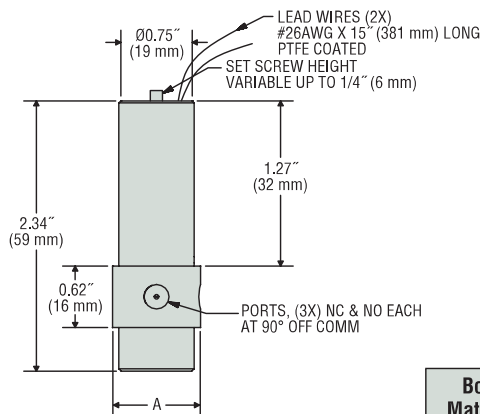


KL Series

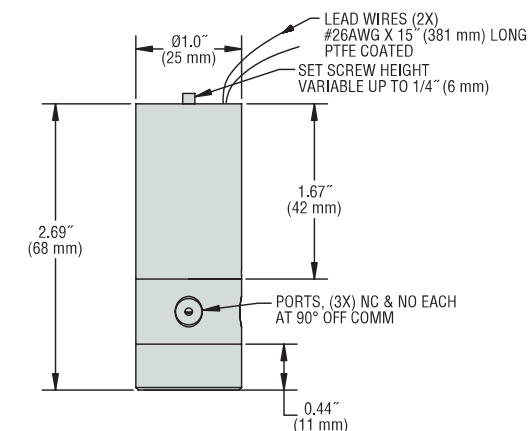


Dimensions – Manifold Mount Body

2-Way, Normally Open (N.O.)

KM Series

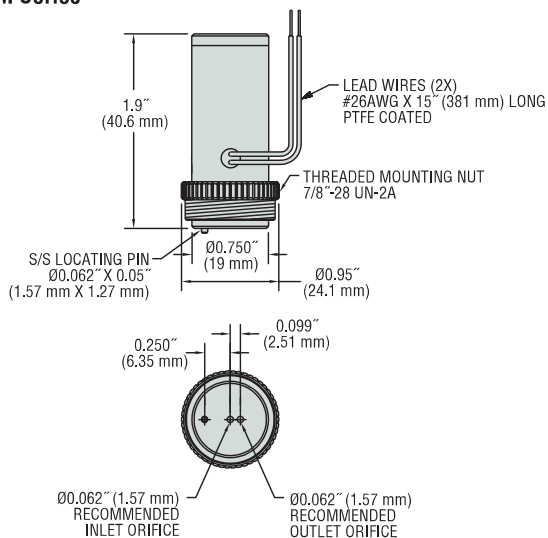


KL Series

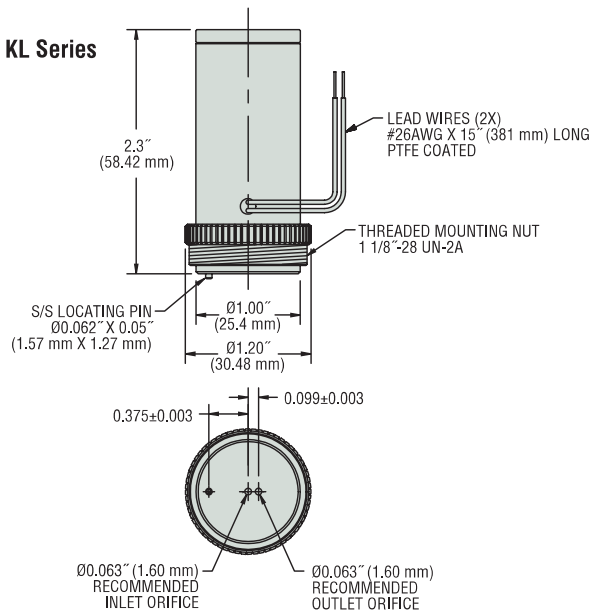


2-Way, Normall Closed (N.C.)


KM Series

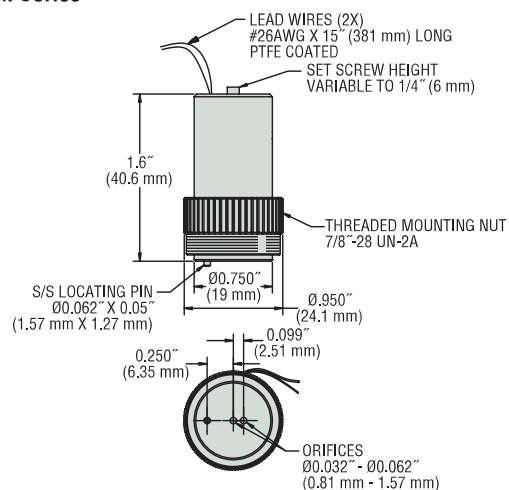

KL Series

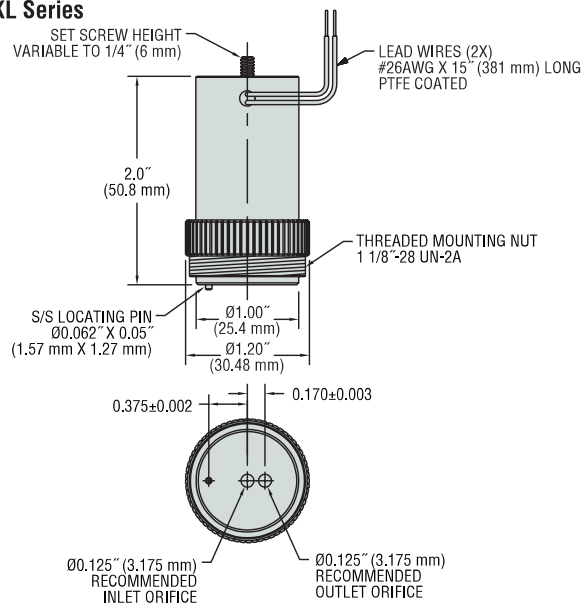


Manifold Preparation – KM Series

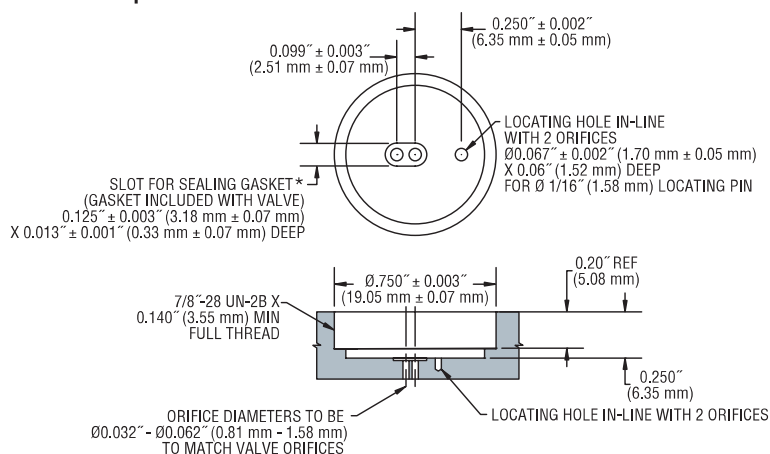

Note: Valve spacing to be 1.00" (25.4 mm) min. center to center
*FFKM gasket is provided for manifold mount valves.

How To Order

Use the **Bold** characters from the choices listed to construct a product code.

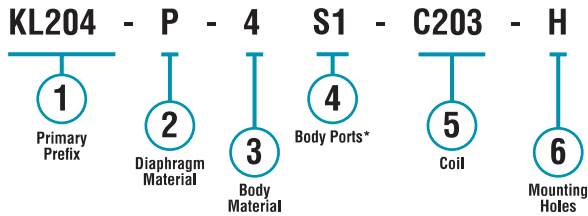

* Combination of Body Port Configuration and Port Thread; BM, BT, SL and SU do **not** use the Thread Size designator

Example: KL204-P-4 S1-C203-H

2-Way N.C. solenoid valve with a PEEK body and FFKM diaphragm configured with 1/4"-28 UNF threaded Side Ports, optional mounting holes, and operating at 12 VDC.

Part Prefix Table ①

	Orifice (inch)	MOPD*		C _v	Internal Volume (μl)			① Primary Prefix
		psig	bar		Side Mount	Manifold Mount	Tube Mount	
2-WAY N.C.	0.032	20	1.38	0.011	19	33	—	KM201
	0.054	20	1.38	0.027	39	N/A	—	KM203
	0.062	20	1.38	0.03	54	52	106	KM204
	0.062	30	2.07	0.042	55	55	—	KL204
	0.092	15	1.03	0.08	133	N/A	—	KL205
	0.125	10	0.69	0.105	296	223	—	KL206
2-WAY N.O.	0.032	20	1.38	0.011	19	33	—	KM221
	0.054	20	1.38	0.027	39	N/A	—	KM223
	0.062	20	1.38	0.03	54	52	106	KM224
	0.062	30	2.07	0.042	55	55	—	KL224
	0.092	10	0.69	0.08	133	N/A	—	KL225
	0.125	10	0.69	0.105	296	223	—	KL226
3-WAY Directional Controls	0.032	15 (NC/O) 20 (Com)	1.03 (NC/O) 1.38 (Com)	0.01	45	N/A	—	KM341
	0.046	15 (NC/O) 20 (Com)	1.03 (NC/O) 1.38 (Com)	0.023	52	N/A	—	KM342
	0.032	30 (NC/O) 60 (Com)	2.07 (NC/O) 4.14 (Com)	0.01	47	N/A	—	KL341
	0.062	30 (NC/O) 60 (Com)	2.07 (NC/O) 4.14 (Com)	0.028	87	N/A	—	KL344

* Maximum Operational Pressure Differential

② Diaphragm Material

2-Way

T = PTFE Polytetrafluoroethylene
E = EPDM Ethylene Propylene Diene (M)
V = FKM Fluoroelastomers¹
P = FFKM Perfluoroelastomer

3-Way KM

T = PTFE Polytetrafluoroethylene
E = EPDM Ethylene Propylene Diene (M)
P = FFKM Perfluoroelastomer

3-Way KL

T = PTFE Polytetrafluoroethylene

③ Body Material

1 = PTFE Polytetrafluoroethylene
2 = ETFE Ethylene Tetrafluoroethylene
3 = PPS Polyphenylene Sulfide
4 = PEEK Polyaryletheretherketone
5 = PSU Polysulfone²

④ Body Port Configuration

BM = Manifold mount³

BT = Tube mount - accomodates 1/16" ID soft tubing^{3,4}

SL = Syringe - luer common port & 1/4"-28 UNF NC/O ports⁵

SU = Syringe - 1/4"-28 UNF ports⁵

S = Threaded side port

B = Threaded bottom port

Port Thread (Used in conjunction with Threaded Port Configurations)

1 = 1/4"-28 UNF flat bottom (Standard)

2 = 10-32⁶

3 = 5/16"-24

4 = 1/8" NPT

5 = M6 X 1,0

⑤ Coil

C203 = 12 VDC

C204 = 24 VDC

C109 = 115 VAC

C116 = 220 VAC

⑥ Mounting Holes

(blank) = Holes not required

H = Mounting Holes in body

Notes

1. Not available in KL2X5 or KL2X6.

2. Available in KM2X4, E/V diaphragms, BM/BT port configurations.

3. See internal volume chart for available orifices.

4. PSU body only.

5. Available in KM3XX, PEEK body, PTFE diaphragm.

6. Not available in KL2X5 or KL2X6.

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

KV/KW Series – 1.25" (31.75 mm) and 1.5" (38.1 mm) Solenoids


- ▶ 2-Way Normally Closed and 3-Way Directional Control
- ▶ MOPD: 15 PSI to 20 PSI
- ▶ C_v Range: 0.055 to 0.14
- ▶ PTFE Bodies and Diaphragms

Our largest orifice sizes for the highest flow rates, with a reduced component height. They feature all-PTFE wetted parts for extreme chemical compatibility.

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

KV205 - T - 1 S1 - C203

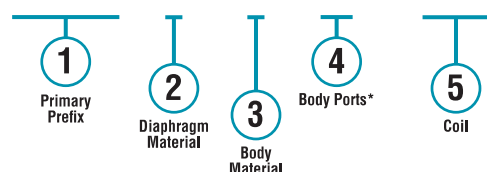

* Combination of Body Port Configuration and Port Thread; Manifold Mount (BM) does **not** use the Thread Size designator

Example:

KV205-T-1 S1-C203-H

2-Way N.C. PTFE solenoid valve, with a PTFE body, 1/4"-28 UNF flat bottom threaded side ports and mounting holes, operating at 12 VDC.

Part Prefix Table ①

	Orifice (inch)	MOPD* (psig)	C_v	Internal Volume (μl)	① Primary Prefix
2-WAY	0.092	20	0.055	108	KV205
N.C.	0.156	15	0.11	239	KW207
3-WAY Directional Controls	0.156	15 (NC/O)	0.14	462	KW347

* Maximum Operational Pressure Differential

② Diaphragm Material

T = PTFE Polytetrafluoroethylene

③ Body Material

1 = PTFE Polytetrafluoroethylene

④ Body Port Configuration

S_ = Threaded side port

Port Thread (Used in conjunction with Threaded Port Configurations)

1 = 1/4"-28 UNF flat bottom¹ (Standard for KV)

2 = 10-32¹

3 = 5/16"-24

4 = 1/8" NPT (Standard for KW)

5 = M6 X 1,0¹

⑤ Coil

C203 = 12 VDC

C204 = 24 VDC

C109 = 115 VAC

C116 = 220 VAC

* Standard selection; will be used unless otherwise specified. Standard selections are not referenced in final part number.

Note


1. Not available with KW Series.




Dimensions – Side Port Body

2-Way, Normally Closed (N.C.)

KV Series

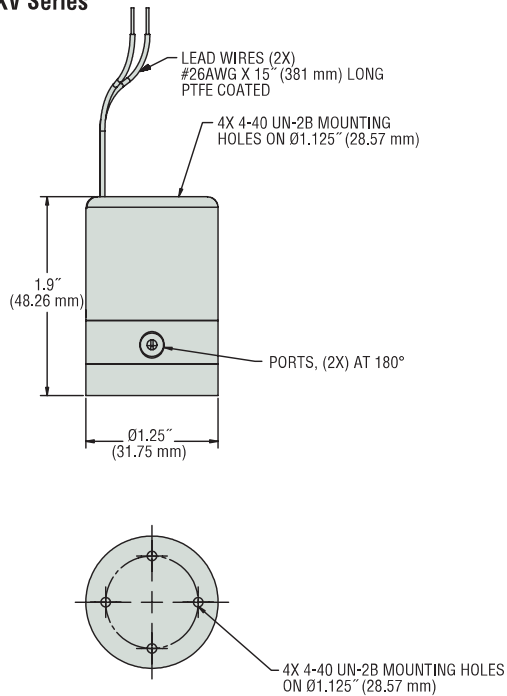


KW Series

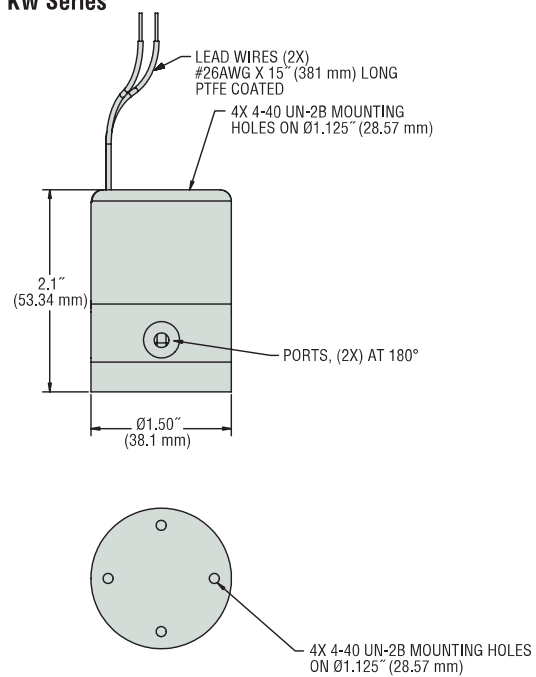

3-Way, Normally Closed (N.C.), Multi-Purpose, Directional Control

KW Series

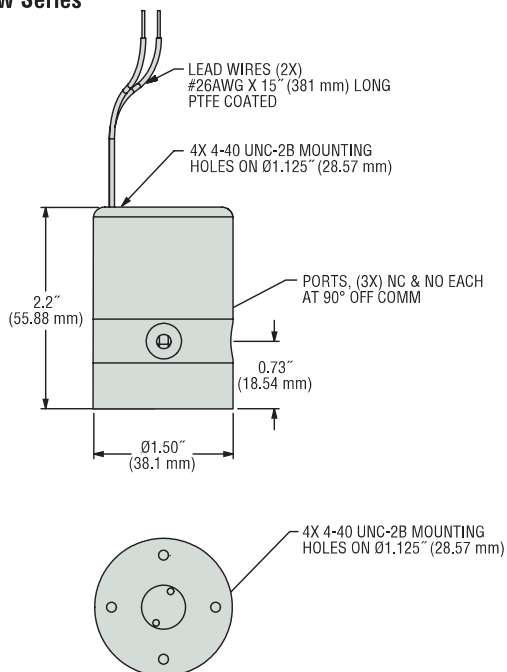

Gems specializes in the design and manufacturing of custom solenoid valves and fluidic systems. If you don't see what you're looking for, or have a question, contact us at 800-378-1600 or info@gemssensors.com.

B-Cryo Series

- ▶ MOPD: 900 PSI
- ▶ C_v Range: 0.045 to 0.440
- ▶ 9 Watts

The B-Cryo Series is a 2-way miniature Cryogenic valve designed and built for service down to -320°F (-196°C) in applications needing a C_v between 0.045 and 0.440. Depending on your temperature requirements, the B-Cryo Series can be configured for liquid nitrogen (LN2), liquid carbon dioxide (LCO2), and other extreme temperature media. PTFE coated plungers, 316 Stainless Steel guide tubes and plunger springs, encapsulated coils, and PTFE or Rulon® seat seals produce a truly robust Cryogenic valve for applications requiring high cycle life and media temperature control.




Typical Applications


- Environmental Chambers
- Food Processing
- Laser Surgical Equipment
- Semiconductor Manufacturing

Dimensions

LN2-Liquid Nitrogen

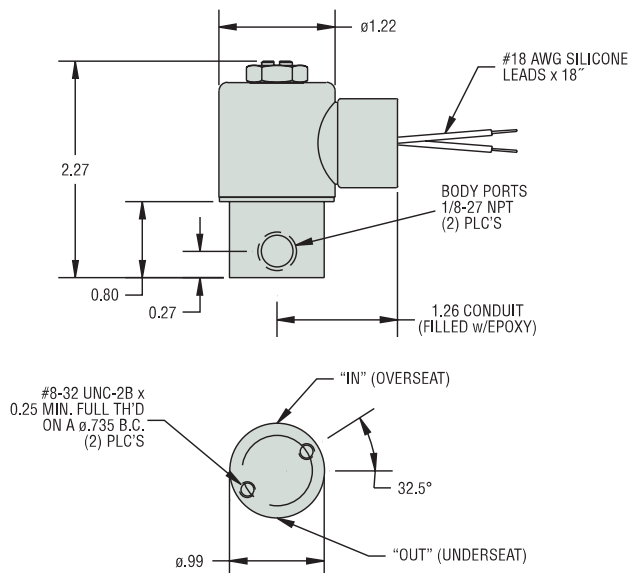


LCO2-Liquid Carbon Dioxide

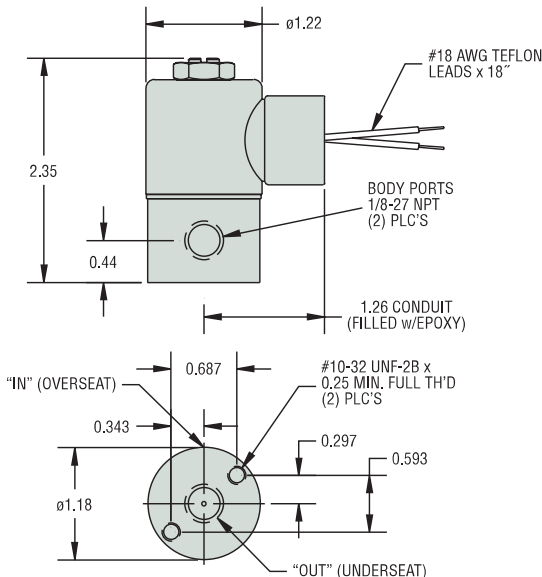

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

B2062 - LN2 - **LB - 120/50/60VAC**

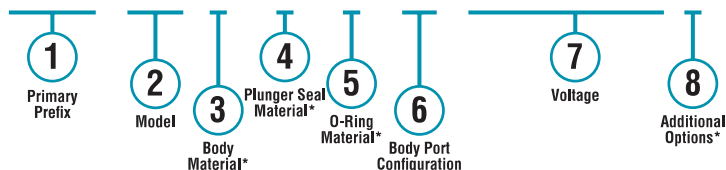

* Blank entry indicates a "Standard" selection (430F Stainless Steel, Rulon® and Variseal®, in this case).

Example:

B2062-LN2-LB-120/50/60VAC

2-Way N.C. Liquid Nitrogen Class-H Encapsulated Coil with lead-wires, conduit filled housing solenoid valve, with 430F stainless steel body, Rulon® plunger seal, Variseal® o-ring, 1/4-18 NPT female thread, operating at 120/50/60 Volt AC.

Part Prefix Table ①

Orifice Body	MOPD (psig)	C _v Body	① Primary Prefix		
			Class H, Encapsulated Coils		
			Lead Wires—Filled Conduit Housing	Lead Wires—Unfilled Conduit Housing	Lead Wires— Grommet Housing
3/64	900	0.045	B2060	B2020	B2010
1/16	405	0.075	B2061	B2021	B2011
5/64	270	0.105	B2062	B2022	B2012
3/32	160	0.160	B2063	B2023	B2013
7/64	110	0.190	B2064	B2024	B2014
1/8	80	0.255	B2065	B2025	B2015
5/32	65	0.365	B2066	B2026	B2016
3/16	30	0.440	B2067	B2027	B2017

② Model

-LN2 = Liquid Nitrogen model

-LCO2 = Liquid Carbon Dioxide model

③ Body Material

LN2 Only

(blank) = 430F Stainless Steel*

LCO2 Only

(blank) = 303 Stainless Steel*

BB = Brass

SB = 304 Stainless Steel

SB5 = 316 Stainless Steel

④ Plunger Seal Material

LN2 Only

(blank) = Rulon®*

LCO2 Only

(blank) = PTFE*

MQ = Silicone (consult factory)

⑤ O-Ring Material

LN2 Only

(blank) = Variseal® (PTFE material with internal spring)*

TO = PTFE (consult factory)

LCO2 Only

(blank) = Variseal® (PTFE material with internal spring)*

TO = PTFE (consult factory)

⑥ Body Port Configuration

LN2 Only

(blank) = 1/8-27 NPT female thread*

LB = 1/4-18 NPT female thread

LT = 1/8-28 BSPT female thread

LU = 1/4-19 BSPT female thread

BI = Bottom over-seat port, female thread (max. orifice = 1/8")

BO = Bottom under-seat port, female thread

RL = 90° porting - left hand

RR = 90° porting - right hand

LCO2 Only

(blank) = 1/8-27 NPT, bottom under-seat port, female thread*

LB = 1/4-18 NPT female thread (in-line porting only)

LT = 1/8-28 BSPT female thread

LU = 1/4-19 BSPT female thread (in-line porting only)

BOM = Bottom under-seat port, male thread
(max. orifice = 1/8", brass body only)

IL = Inline porting, 180° apart

⑦ Voltage

LN2 Only

___ VDC = DC (specify voltage)

___ VAC = AC Rectified (specify voltage)

LCO2 Only

___ VDC = DC (specify voltage)

___ VAC = AC Rectified (specify voltage)

⑧ Additional Options

LN2 Only

(blank) = Chamfered and PTFE coated plunger*

(blank) = 316 Stainless Steel 1-piece guide assembly*

(blank) = 316 Stainless Steel spring*

LCO2 Only

(blank) = Chamfered and PTFE coated plunger*

(blank) = 316 Stainless Steel 1-piece guide assembly*

(blank) = 316 Stainless Steel spring*

* Standard selection; will be used unless otherwise specified.
Standard selections are not referenced in final part number.

D-Cryo Series

- ▶ MOPD: 1000 PSI
- ▶ C_v Range: 0.040 to 0.770
- ▶ 15 Watts


The D-Cryo Series is a 2-way, high flow, miniature Cryogenic valve designed and built for service down to -320°F (-196°C). Depending on your temperature requirements, the D-Cryo Series can be configured for liquid nitrogen (LN2), liquid carbon dioxide (LCO2), and other extreme temperature media. PTFE coated plungers, 316 Stainless Steel guide tubes and plunger springs, encapsulated coils, and PTFE or Rulon® seat seals produce a truly robust Cryogenic valve for applications requiring high cycle life and media temperature control.

Typical Applications


- Environmental Chambers
- Food Processing
- Laser Surgical Equipment
- Semiconductor Manufacturing

Dimensions

LN2-Liquid Nitrogen

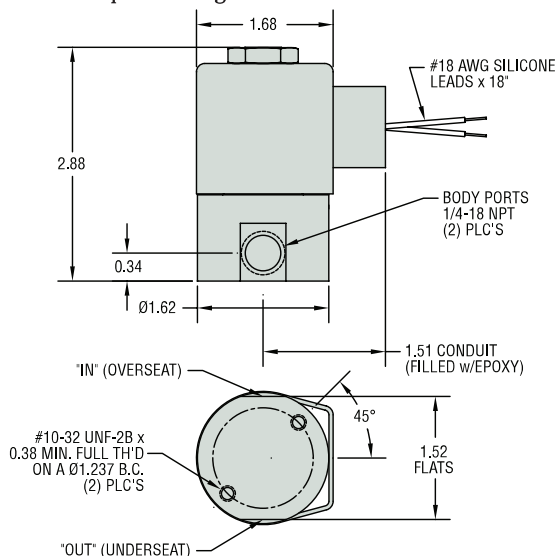


LCO2-Liquid Carbon Dioxide

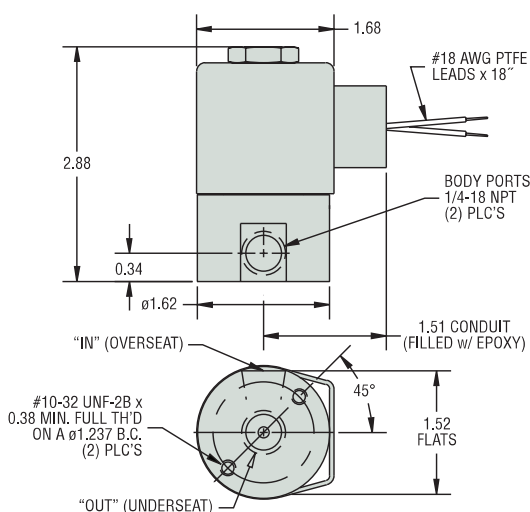

How To Order

Use the **Bold** characters from the choices listed on the following page to construct a product code.

D2062 - LN2 - LT - 12VDC

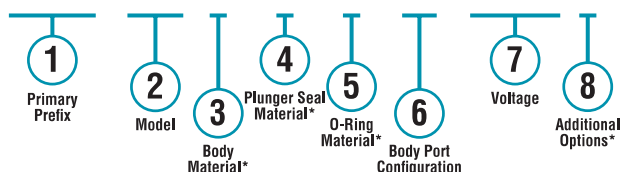

* Blank entry indicates a "Standard" selection (430F Stainless Steel, Rulon® and Variseal®, in this case).

Example:

D2062-LN2-LT-12VDC

2-Way N.C. Liquid Nitrogen Class-H Encapsulated Coil with lead-wires, conduit filled housing solenoid valve, with 430F stainless steel body, Rulon® plunger seal, Variseal® o-ring, 1/8-28 BSPT female thread, operating at 12 DC with rectified coil.



Part Prefix Table ①

Orifice Body	MOPD (psig)	C _v Body	① Primary Prefix		
			Class H, Encapsulated Coils		
			Lead Wires—Filled Conduit Housing	Lead Wires—Unfilled Conduit Housing	Lead Wires— Grommet Housing
3/64	1000*	0.040	D2061	D2021	D2011
1/16	1000*	0.070	D2062	D2022	D2012
3/32	640	0.165	D2063	D2023	D2013
1/8	375	0.305	D2064	D2024	D2014
5/32	185	0.365	D2065	D2025	D2015
3/16	130	0.470	D2066	D2026	D2016
1/4	40	0.770	D2067	D2027	D2017

* For higher pressure, consult factory.

② Model

-LN2 = Liquid Nitrogen model

-LC02 = Liquid Carbon Dioxide model

③ Body Material

LN2 Only

(blank) = 430F Stainless Steel*

LC02 Only

(blank) = 430F Stainless Steel*

BB = Brass

④ Plunger Seal Material

LN2 Only

(blank) = Rulon®*

LC02 Only

(blank) = PTFE*

MQ = Silicone (consult factory)

⑤ O-Ring Material

LN2 Only

(blank) = Variseal® (PTFE material with internal spring)*

LC02 Only

(blank) = Fluorosilicone*

TO = PTFE

⑥ Body Port Configuration

LN2 Only

(blank) = 1/4-18 NPT female thread*

LC = 1/8-27 NPT female thread

LD = 3/8-18 NPT female thread

LT = 1/8-28 BSPT female thread

LU = 1/4-19 BSPT female thread

BI = Bottom over-seat port, female thread

BO = Bottom under-seat port, female thread

LC02 Only

(blank) = 1/4-18 NPT, bottom under-seat port, female thread*

LC = 1/8-27 NPT female thread

LD = 3/8-18 NPT female thread (in-line porting only)

LT = 1/8-28 BSPT female thread

LU = 1/4-19 BSPT female thread

IL = Inline porting, 180° apart

⑦ Voltage

LN2 Only

___ VDC = DC (specify voltage)

___ VAC = AC Rectified (specify voltage)

LC02 Only

___ VDC = DC (specify voltage)

___ VAC = AC Rectified (specify voltage)

⑧ Additional Options

LN2 Only

(blank) = Chamfered and PTFE coated plunger*

(blank) = 316 Stainless Steel 1-piece guide assembly*

(blank) = 316 Stainless Steel spring*

LC02 Only

(blank) = Chamfered and PTFE coated plunger*

(blank) = 316 Stainless Steel 1-piece guide assembly*

(blank) = 316 Stainless Steel spring*

* Standard selection; will be used unless otherwise specified.
Standard selections are not referenced in final part number.

Manifold Assemblies

Gems Valve Engineers specialize in working with OEMs to design and manufacture integrated valve and manifold assemblies to meet most any fluidic system requirements. Our expert team of field and in-house engineers can deliver AutoCAD® or SolidWorks drawings in days for easy integration into OEM equipment. Whether it is a single or multiple position manifold—made from plastic, aluminum, brass or stainless steel—final systems are delivered completely assembled, tested, and ready for installation into your equipment.

Gems Manifold Assemblies offer features you require, in a compact package, at a competitive price. Integrated manifold assemblies provide:

- Simplified fluidic systems
- Decreased number of potential leak paths
- Reduction in the amount of mounting hardware
- Reduced quantity of fittings and tubing via common passages
- Compact package
- Design opportunity for multiple valve configurations to handle complex and precise flow control
- Reduced labor content required by OEMs
- Easy valve maintenance or replacement

All Gems valve families can be integrated into a manifold system. Contact your Gems Valve Engineer for a manifold assembly that will fulfill all of your application requirements. Contact us at 800-378-1600 or info@gemssensors.com.

Fluidic Systems

Purchasing a complete fluidic system through Gems eliminates the time and effort of multiple purchase orders and reduces receiving, inspection, and coordination of different parts down to a single assembly. Plus, buying from a single source gives OEMs one contact point for design changes, expediting, and warranty questions.

Gems valve engineers and manufacturing have a 50-year history of working with OEMs to develop, design, and manufacture their complex fluidic systems; from simple wiring harnesses and connectors to plug and play sub-assemblies and additional integrated fluidic components.

Designing and purchasing a complete turnkey fluidic system from Gems Sensors & Controls has many advantages.

- Receiving a complete 100% tested system that can be installed directly into your end product
- Reducing the number of suppliers required
- Decreasing the assembly of numerous third-party parts
- Minimizing the number of potential leak-points by eliminating tubing and fittings
- Reducing multiple components into a smaller and simplified final system

Our team of experts can integrate:

- Multiple valve types, including 3rd party manufacturers, into one assembly
- Numerous tube and pipe fittings
- Various electrical terminations
- Sensors/Switches/Gauges:
 - Pressure switch, transducer or gauge
 - Fluid flow sensor
 - Fluid level sensor
 - Temperature switch or transducer
- Inline media filters
- Heaters and thermistors

Contact your Gems Valve Engineer for a fluidic system that will fulfill all of your application requirements. Contact us at 800-378-1600 or info@gemssensors.com.





Send your ADS directly to a Gems Engineer!
Fax#: 860-747-4244 • This form may also be completed online at gemssensors.com for RFQ.

One Cowles Road
Plainville, CT 06062
Toll Free: 888.840.1230

Name	Title	Email
Company	Phone	Fax
Address	Address 2	
City	State	Zip
Date / /		

Please describe your application: ☐ Liquid ☐ Pneumatic ☐ Vacuum Service ☐ Oxygen Service ☐ Liquid CO2 Cryogenic ☐ Liquid N2 Cryogenic

Immediate quantity required _____ Estimated annual quantity _____

Valve Configuration or Function

DE-ENERGIZED STATE

- ☐ 2-Way Normally Closed
- ☐ 2-Way Normally Open
- ☐ 2-Way Normally Closed (Diaphragm)
- ☐ 2-Way Normally Closed Dual Purpose
- ☐ 3-Way Normally Closed Free Vent
- ☐ 3-Way Normally Closed Line Connect
- ☐ 3-Way Normally Open
- ☐ 3-Way Multi-Purpose
- ☐ 3-Way Directional Control

FLOW REQUIREMENTS

C_v: Body _____, Stop _____ Orifice Diameter: Body _____, Stop _____
Flow at the Body Orifice _____ (GPM or SCFM) with a _____ psig at the Inlet, and _____ psig at the outlet
Flow at the Stop Orifice _____ (GPM or SCFM) with a _____ psig at the Inlet, and _____ psig at the outlet

PRESSURE

Operating Pressure _____
Max. Pressure _____
Min. Pressure _____
Max. Back Pressure _____

TEMPERATURE

Media Temp. _____
Max. Media Temp. _____
Min. Media Temp. _____
Ambient Temp. _____
Max. Ambient Temp. _____
Min Ambient Temp. _____

MEDIA(S) _____

BODY MATERIAL

- ☐ Brass
- ☐ Stainless Steel
- ☐ Aluminum
- ☐ Polypropylene
- ☐ Other _____

PLUNGER SEAL MATERIAL

- ☐ Nitrile
- ☐ Viton®
- ☐ Ethylene Propylene
- ☐ Neoprene
- ☐ Silicone
- ☐ Perfluoroelastomer
- ☐ Other _____

O-RING MATERIAL

- ☐ Nitrile
- ☐ Viton®
- ☐ Ethylene Propylene
- ☐ Neoprene
- ☐ Silicone
- ☐ Perfluoroelastomer
- ☐ Other _____

ELECTRICAL REQUIREMENTS

- ☐ AC ☐ DC
- Max. Voltage _____
- Min. Voltage _____

Operating Voltage _____, (_____ Hz)

- ☐ Continuous Duty
- ☐ Intermittent Duty
- Max. Time ON _____
- Min. Time OFF _____

Max. Wattage _____

Max. Cycle Rate _____
Life Cycle Expectancy _____

COIL REQUIREMENTS

- ☐ Class B
- ☐ Class F
- ☐ Class H
- ☐ Tape Wound
- ☐ Encapsulated
- ☐ Molded
- ☐ Lead Wire (Specify Length If required) _____
- ☐ 3/16" Spades
- ☐ 1/4" Spades
- ☐ 0.110" Spades
- ☐ 18 mm DIN
- ☐ 11 mm DIN
- ☐ 9.4 mm DIN

- ☐ Rectified
- ☐ Arc Suppression Diode
- ☐ Special Connectors (Please Specify) _____

HOUSE STYLE

- ☐ Grommet
- ☐ Conduit, 1/2-14 NPS
- ☐ Grommet with Bracket
- ☐ Conduit with Bracket
- ☐ Other _____

BODY CONFIGURATION

- | | | | | | | | | | |
|--|------------------------------------|---|------------------------------------|--|------------------------------------|---|--|--|---|
| ☐ Single Valve Body | ☐ 1/8" NPT | ☐ Stop Port (If Different) | ☐ 1/8" NPT | ☐ Body Port Orientation | ☐ 180° | ☐ Female Bottom Port | ☐ Specify Port Size _____ | ☐ Male Bottom Porting | ☐ 1/8" NPT (Brass) |
| ☐ Manifold Mount | ☐ 1/4" NPT | ☐ 1/4" NPT | ☐ 1/4" NPT | ☐ 1/4" NPT | ☐ 90° Right | ☐ 90° Right | | ☐ Pressure Over-Seat | |
| ☐ Operator Only (No Body) | ☐ 3/8" NPT | ☐ 3/8" NPT | ☐ 3/8" NPT | ☐ 3/8" NPT | ☐ 90° Left | ☐ 90° Left | | ☐ Pressure Under Seat | |
| ☐ Metering | ☐ #10-32 | ☐ #10-32 | ☐ #10-32 | | | | | | |
| | ☐ 1/8" BSPT | ☐ 1/8" BSPT | ☐ 1/8" BSPT | | | | | | |
| | ☐ M5 x 0.8 | ☐ M5 x 0.8 | ☐ M5 x 0.8 | | | | | | |

What will be the Valves Environment?

Will the valve be exposed to moisture? ☐ Yes ☐ No Will the valve be exposed to external contamination? ☐ Yes ☐ No

Will the valve be in close proximity to a heat-generating source (e.g. Transformer, pump, motor)? ☐ Yes ☐ No

Will the valve be subject to vibration or shock? ☐ No ☐ Yes If yes: Vibration _____ CPS at _____ Gs, Shock _____ GS duration for _____ ms.